



Level the mount and mark.




Drill the mounting holes.

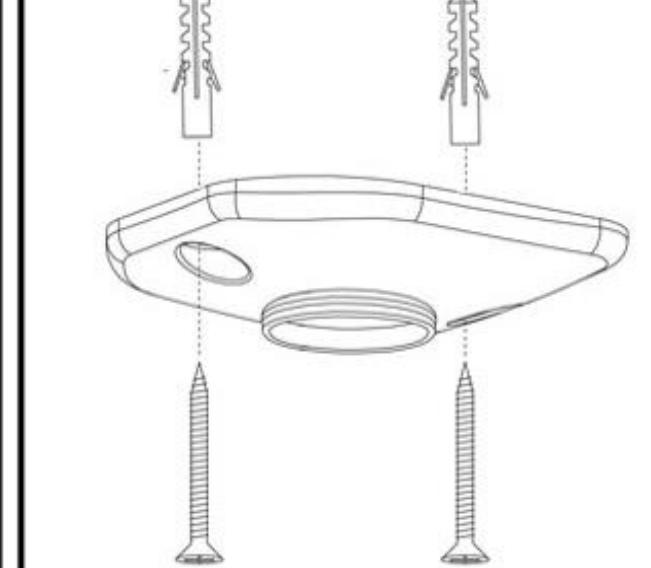


Insert the ceiling anchors* to the ceiling and tap them flush with a hammer.
* Never use ceiling anchors on dry ceiling

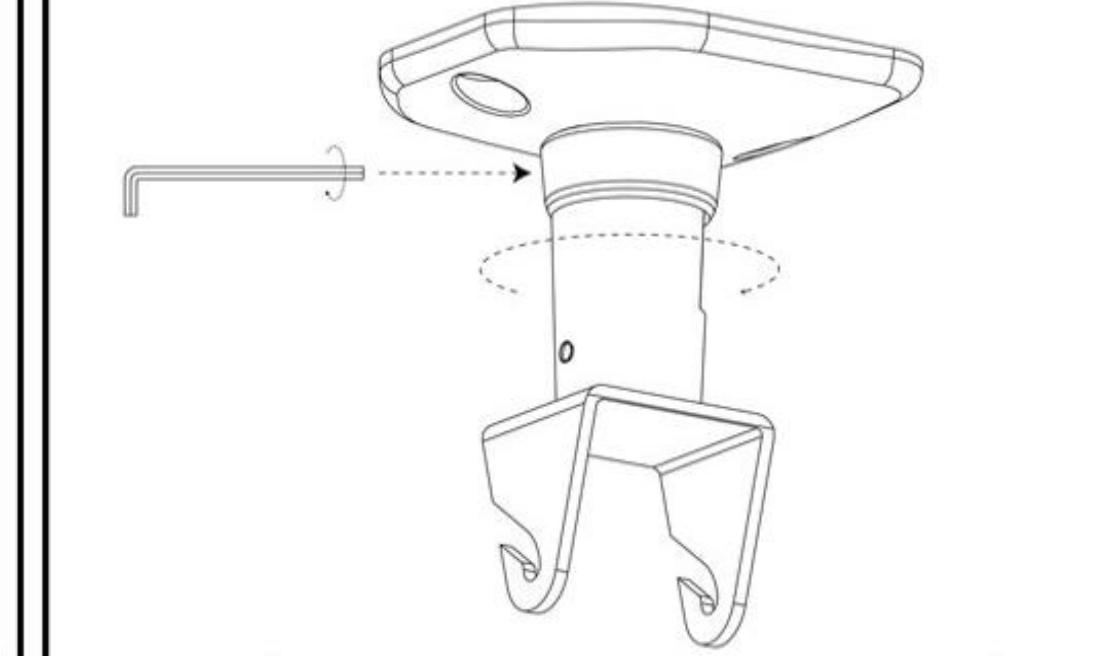


Screw body to ceiling plate and tighten safety screw.

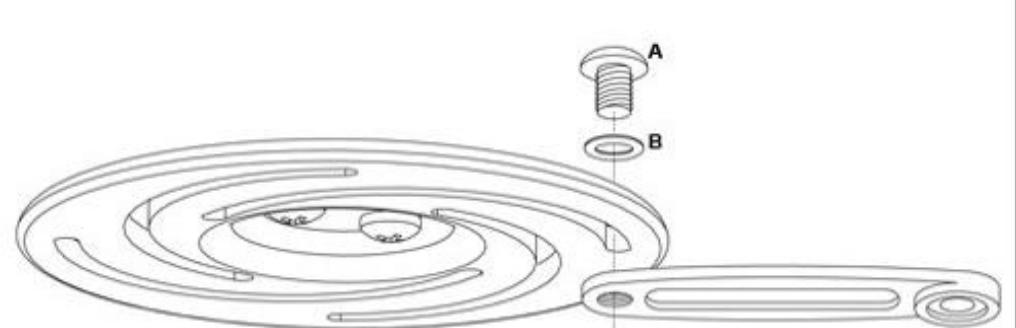


Secure mount arms to mount base.

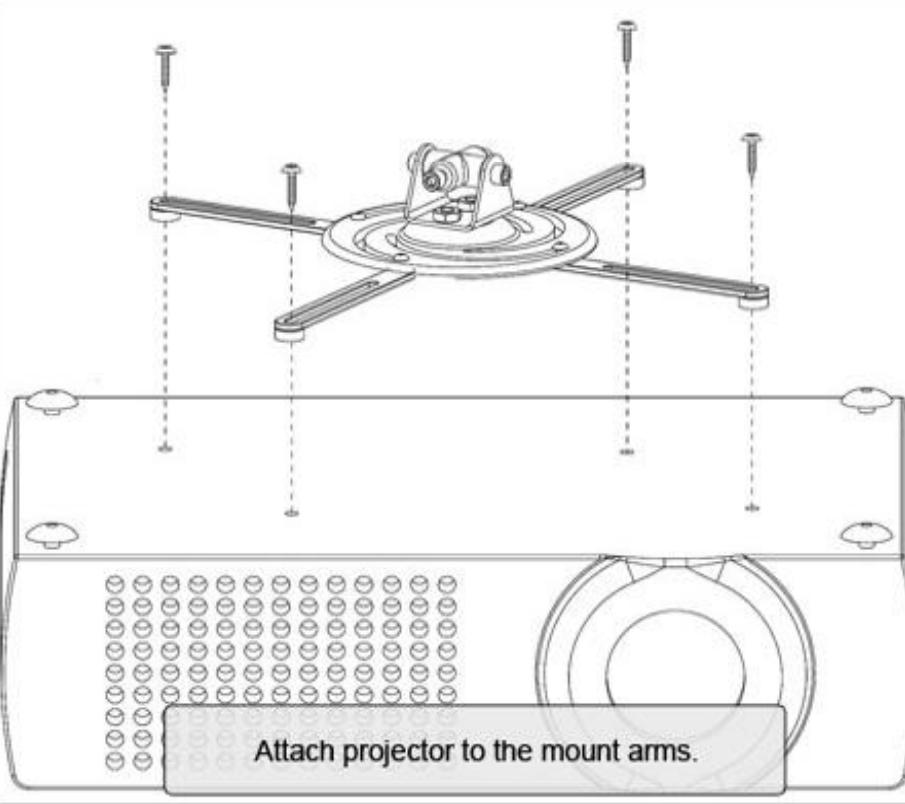

Attach projector to the mount arms.

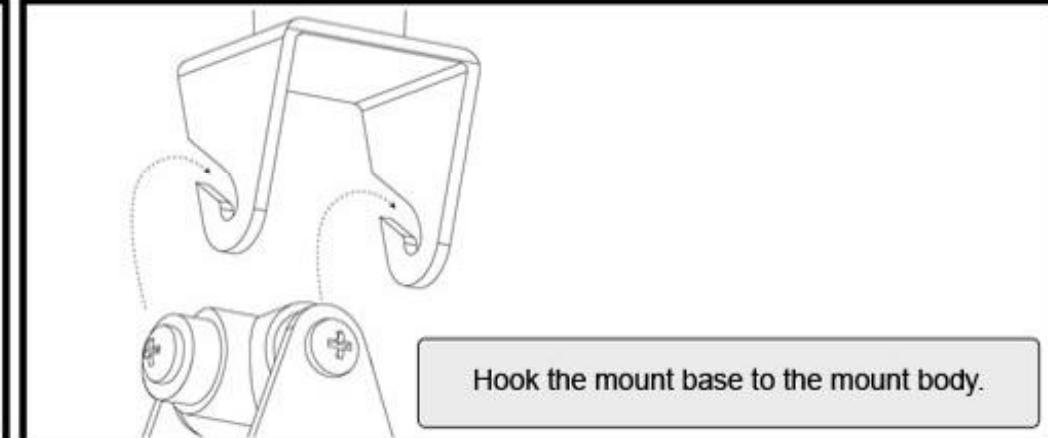

Hook the mount base to the mount body.

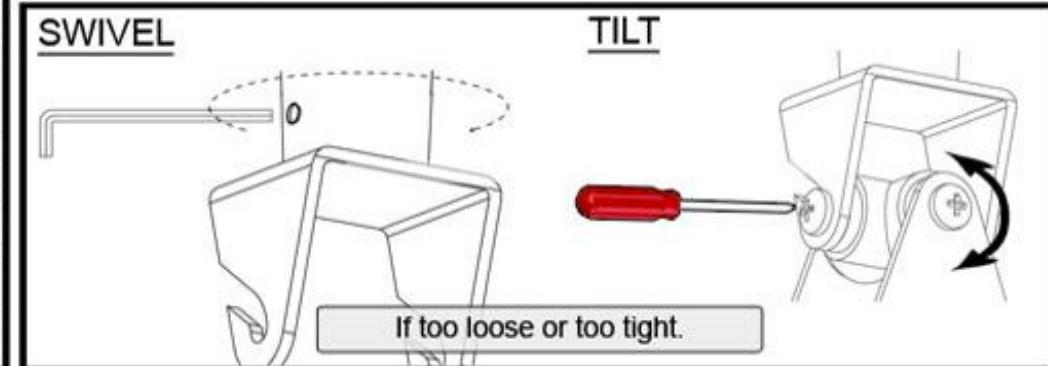


SWIVEL

TIILT


If too loose or too tight.

HARDWARE KIT

	M4	x4
	M5	x4
	x2	
	x1	
	M6	x4
	M6	x4
	A	x4
	M4	x4
	M4	x4

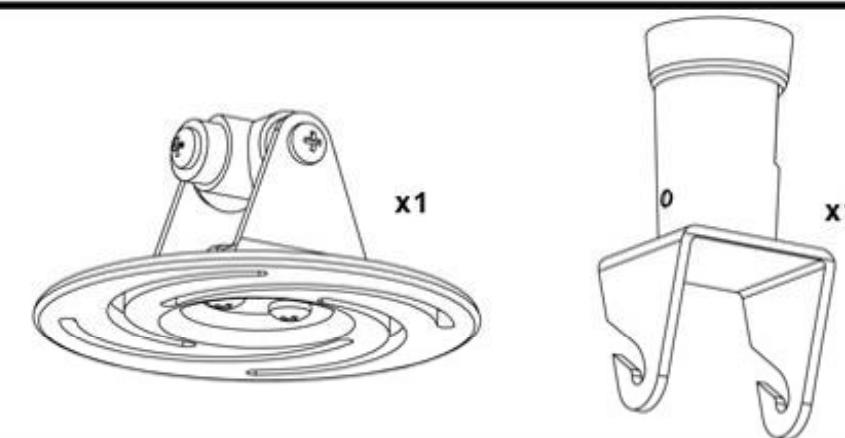

SONOROUS®
SOUND AND VISION IN STYLE

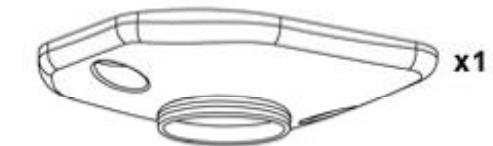

REV NO: 03 / 11.07.2011