

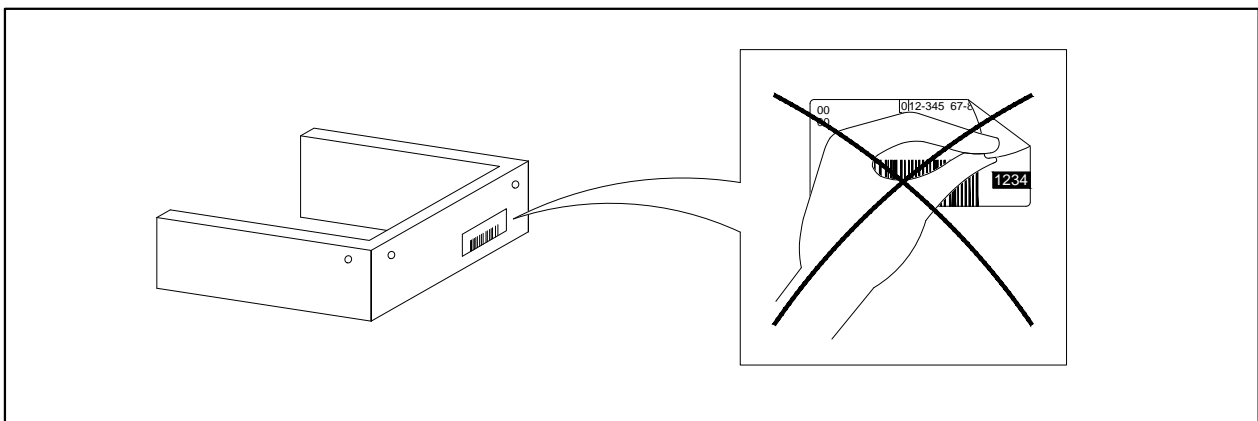
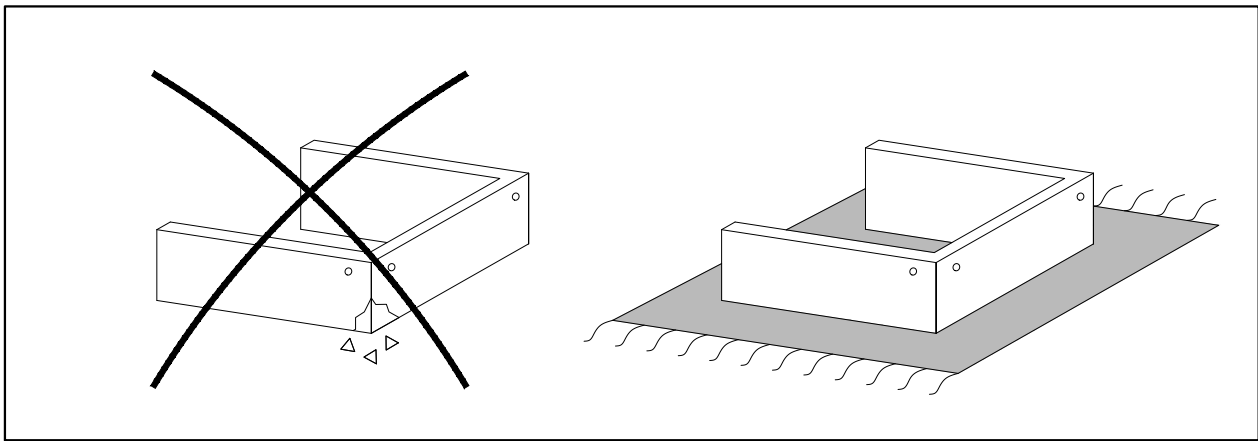
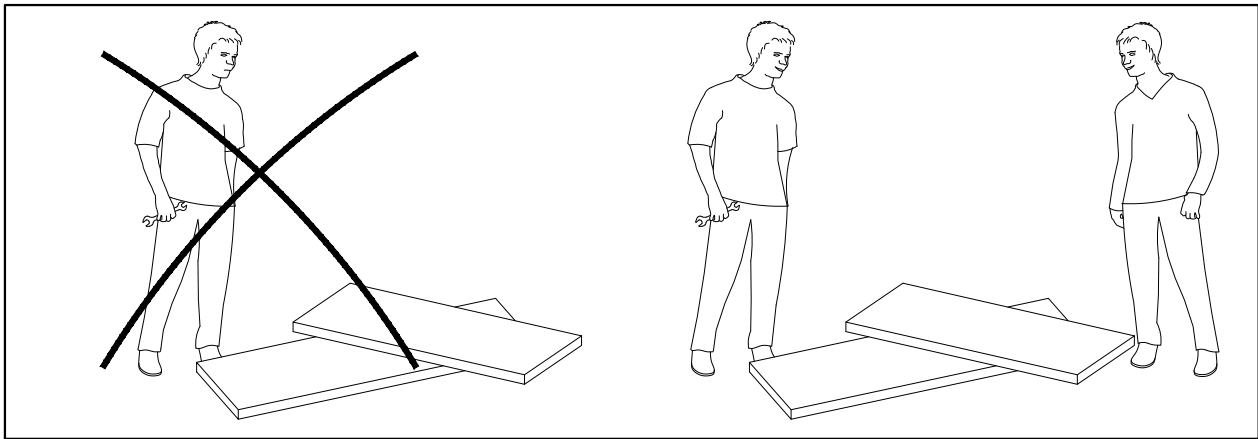


Инструкция по сборке

Кровать без подъёмного механизма


Дизайн 1220, 1221, 1222, 1223, 1224, 1226, 1227

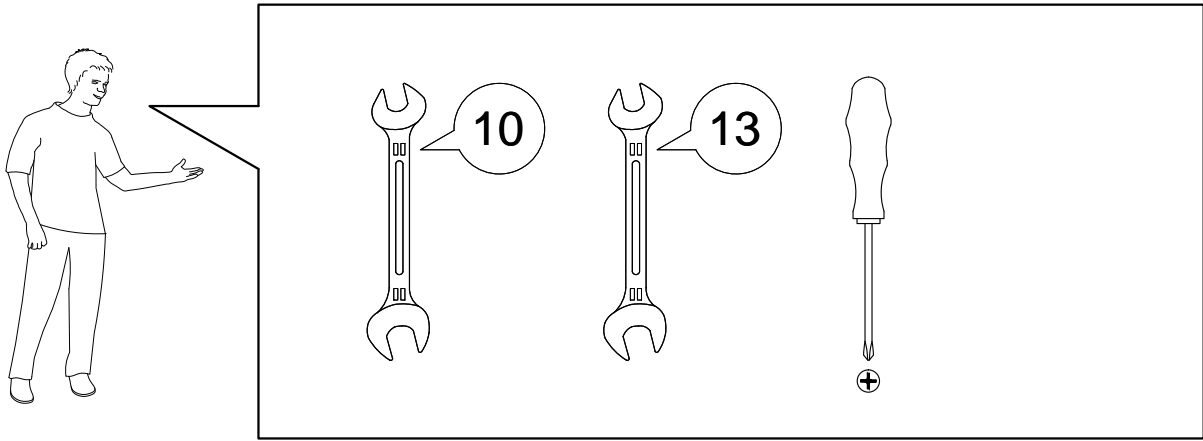

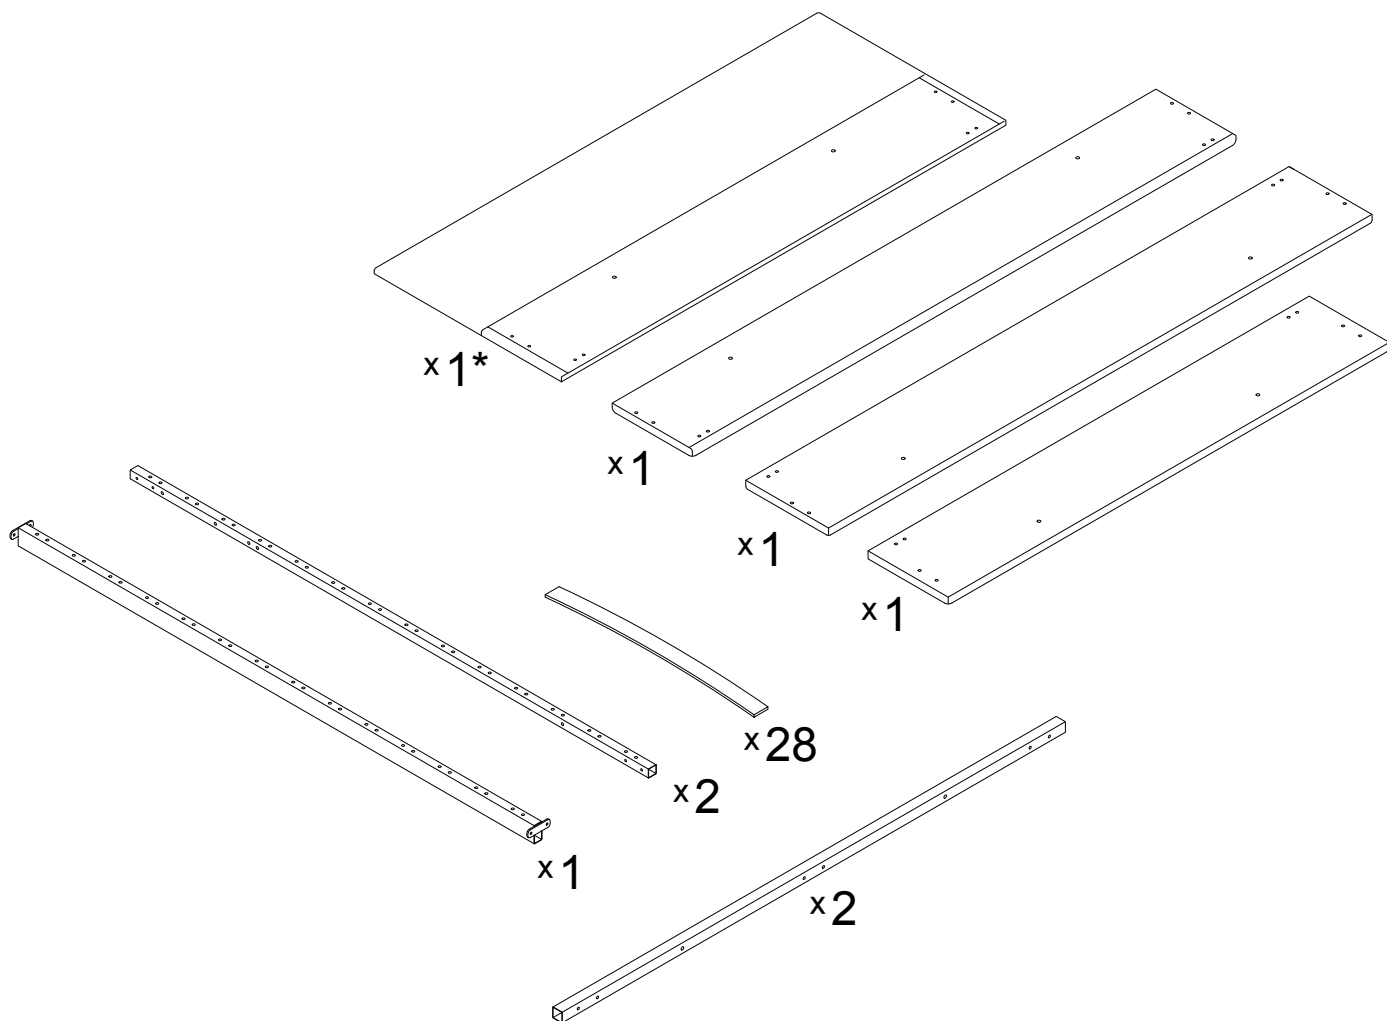


*Дизайн спинки различается в зависимости от модификации кровати.


M 1:1

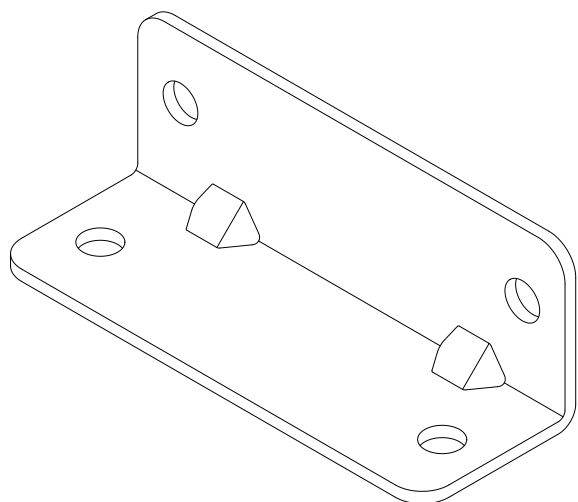

x4

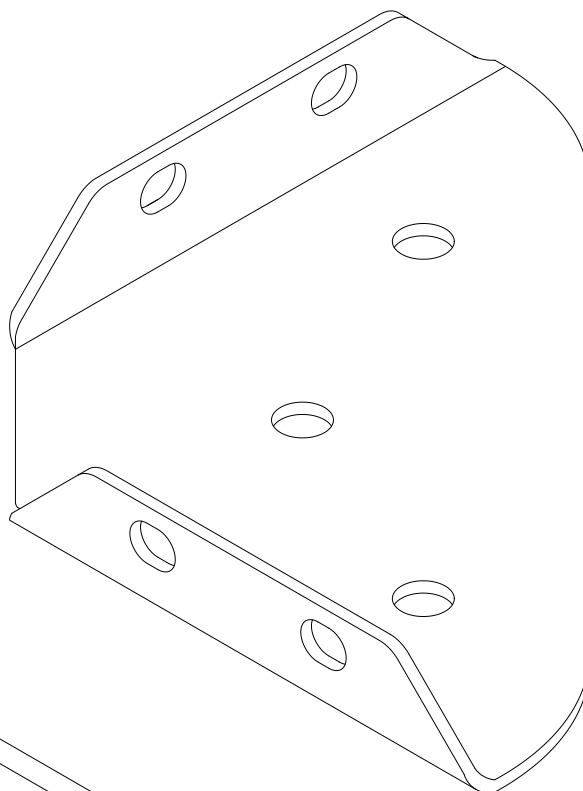


x4

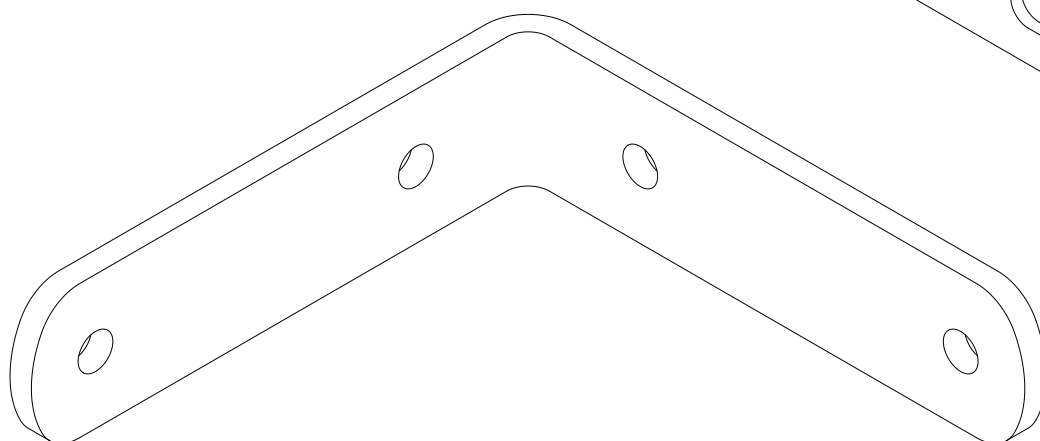


x4

ЛД1

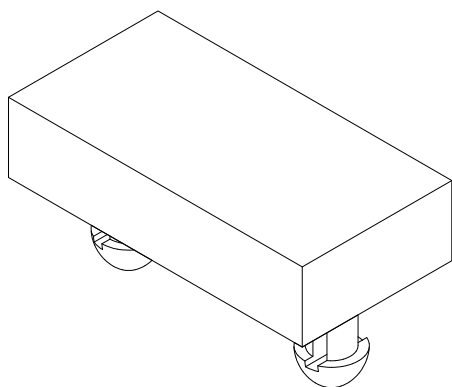















x28

ЛД2

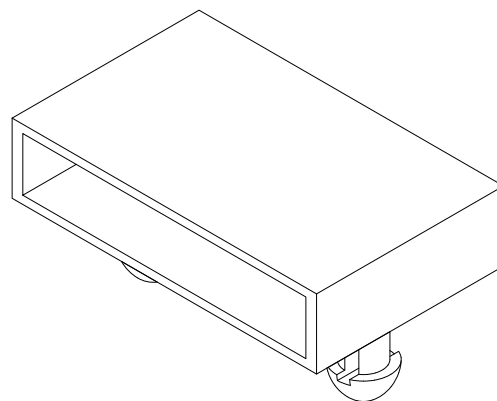


x14





M 1:1

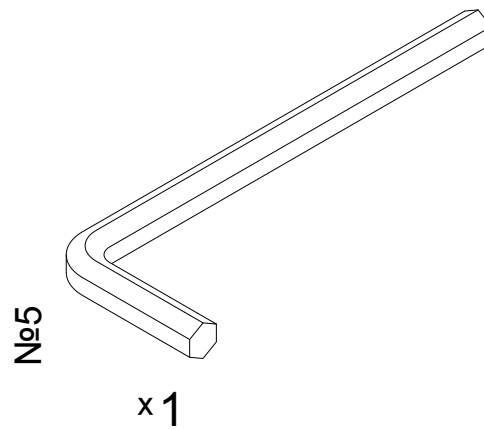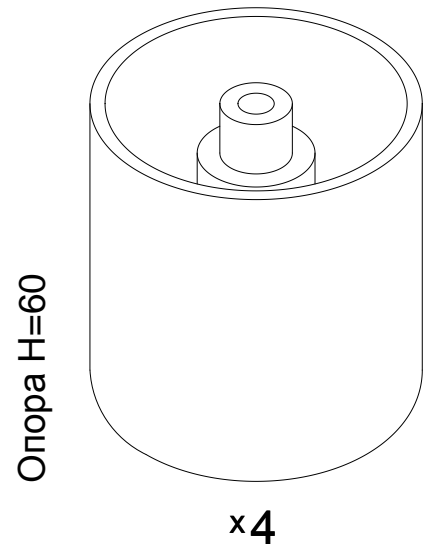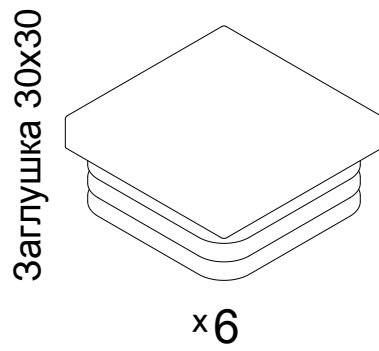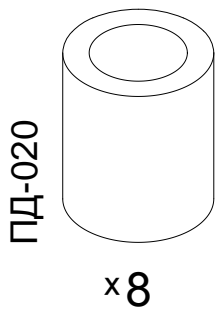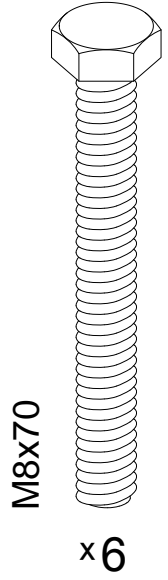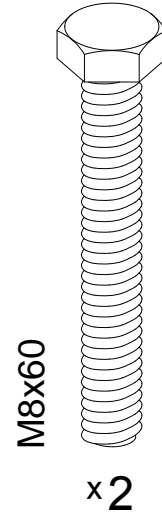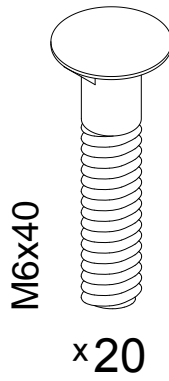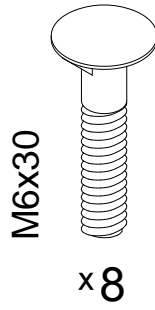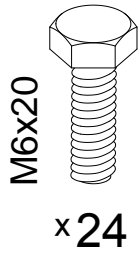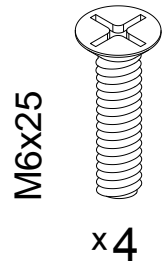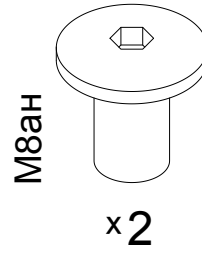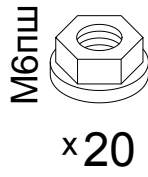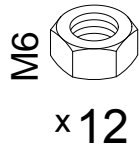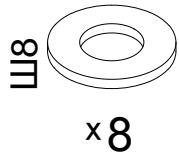


1

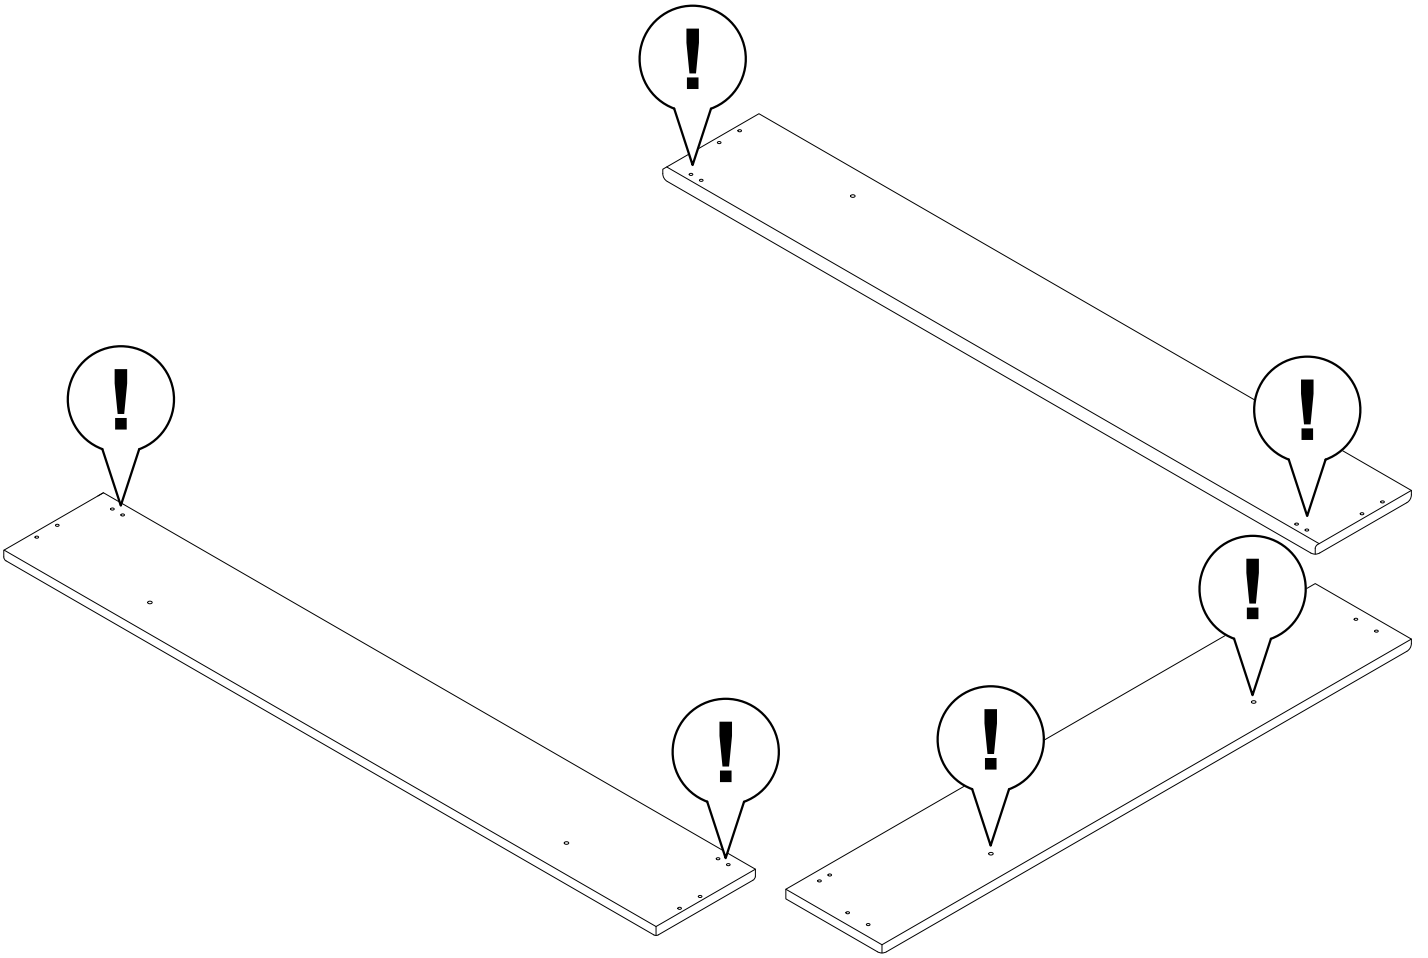


2

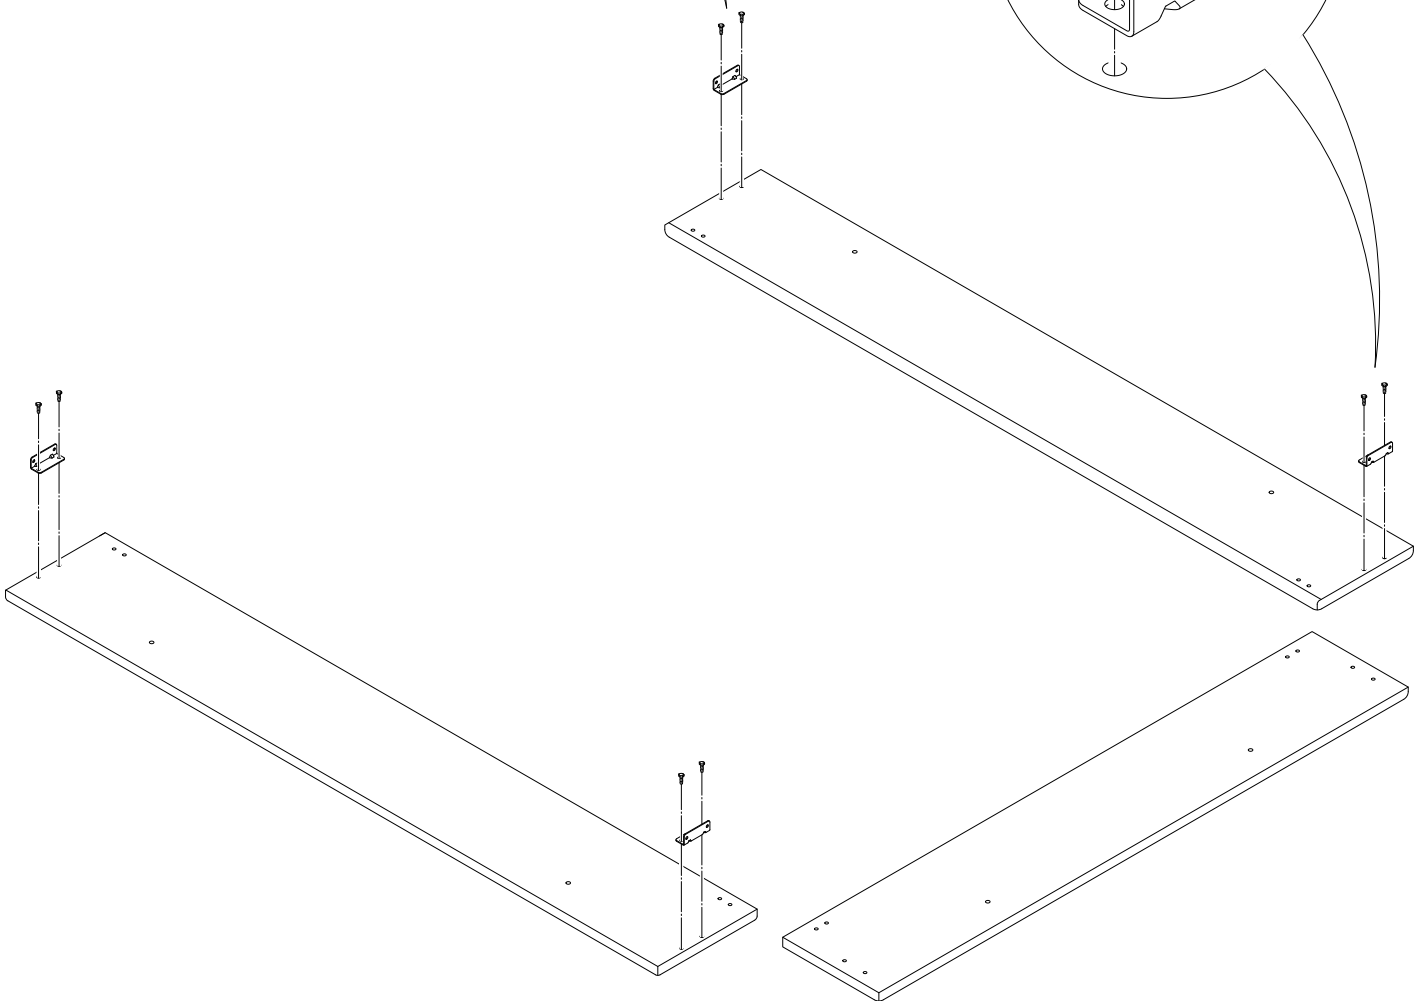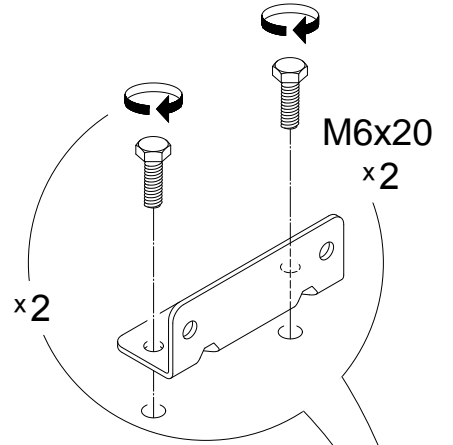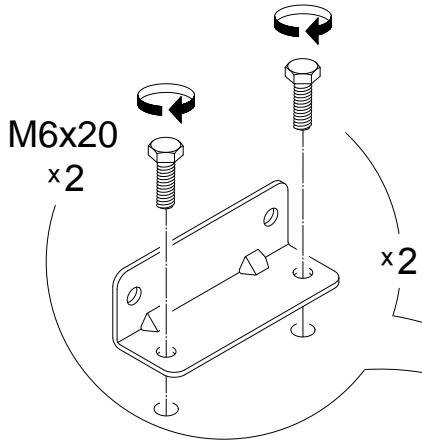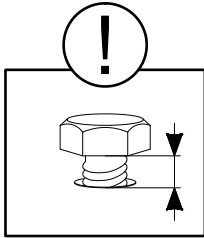


3

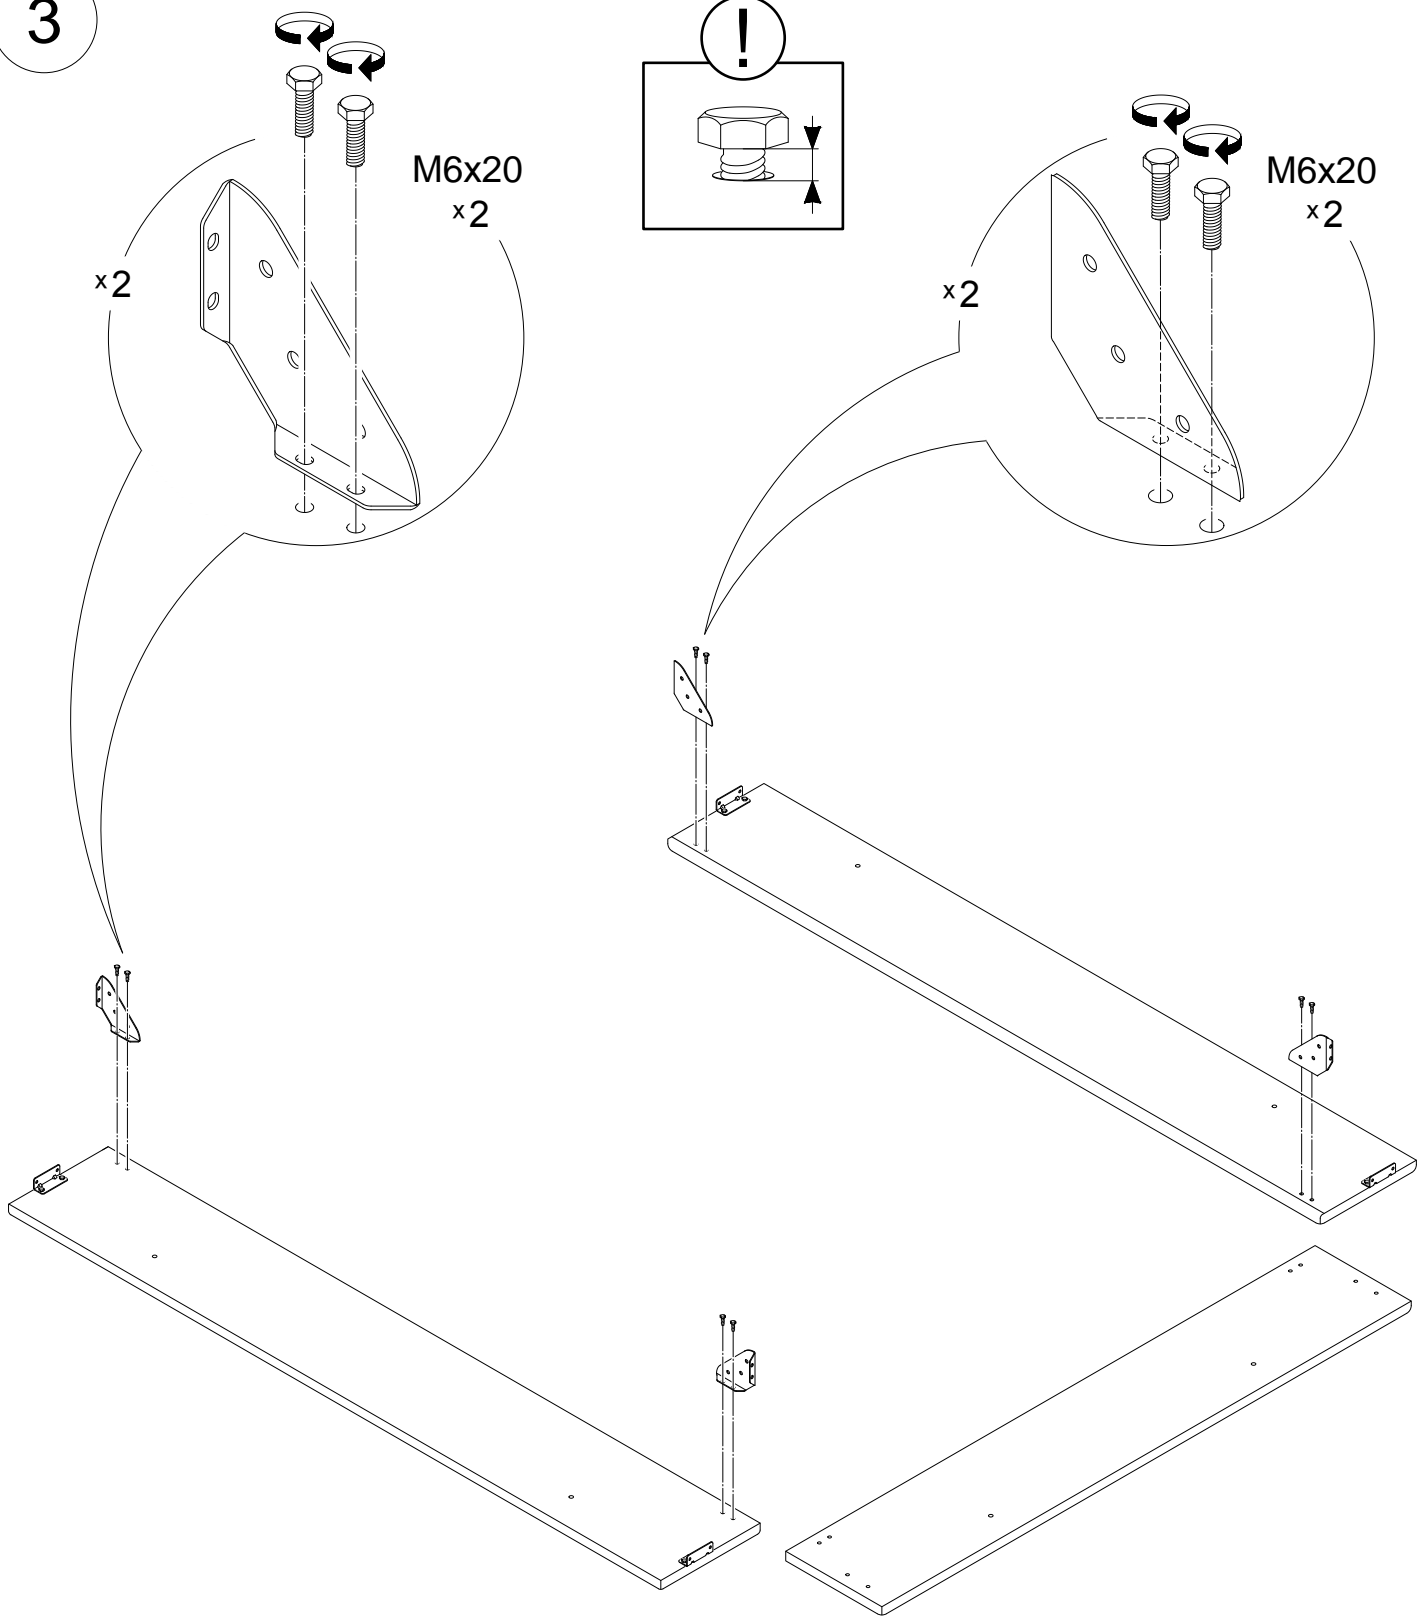



4

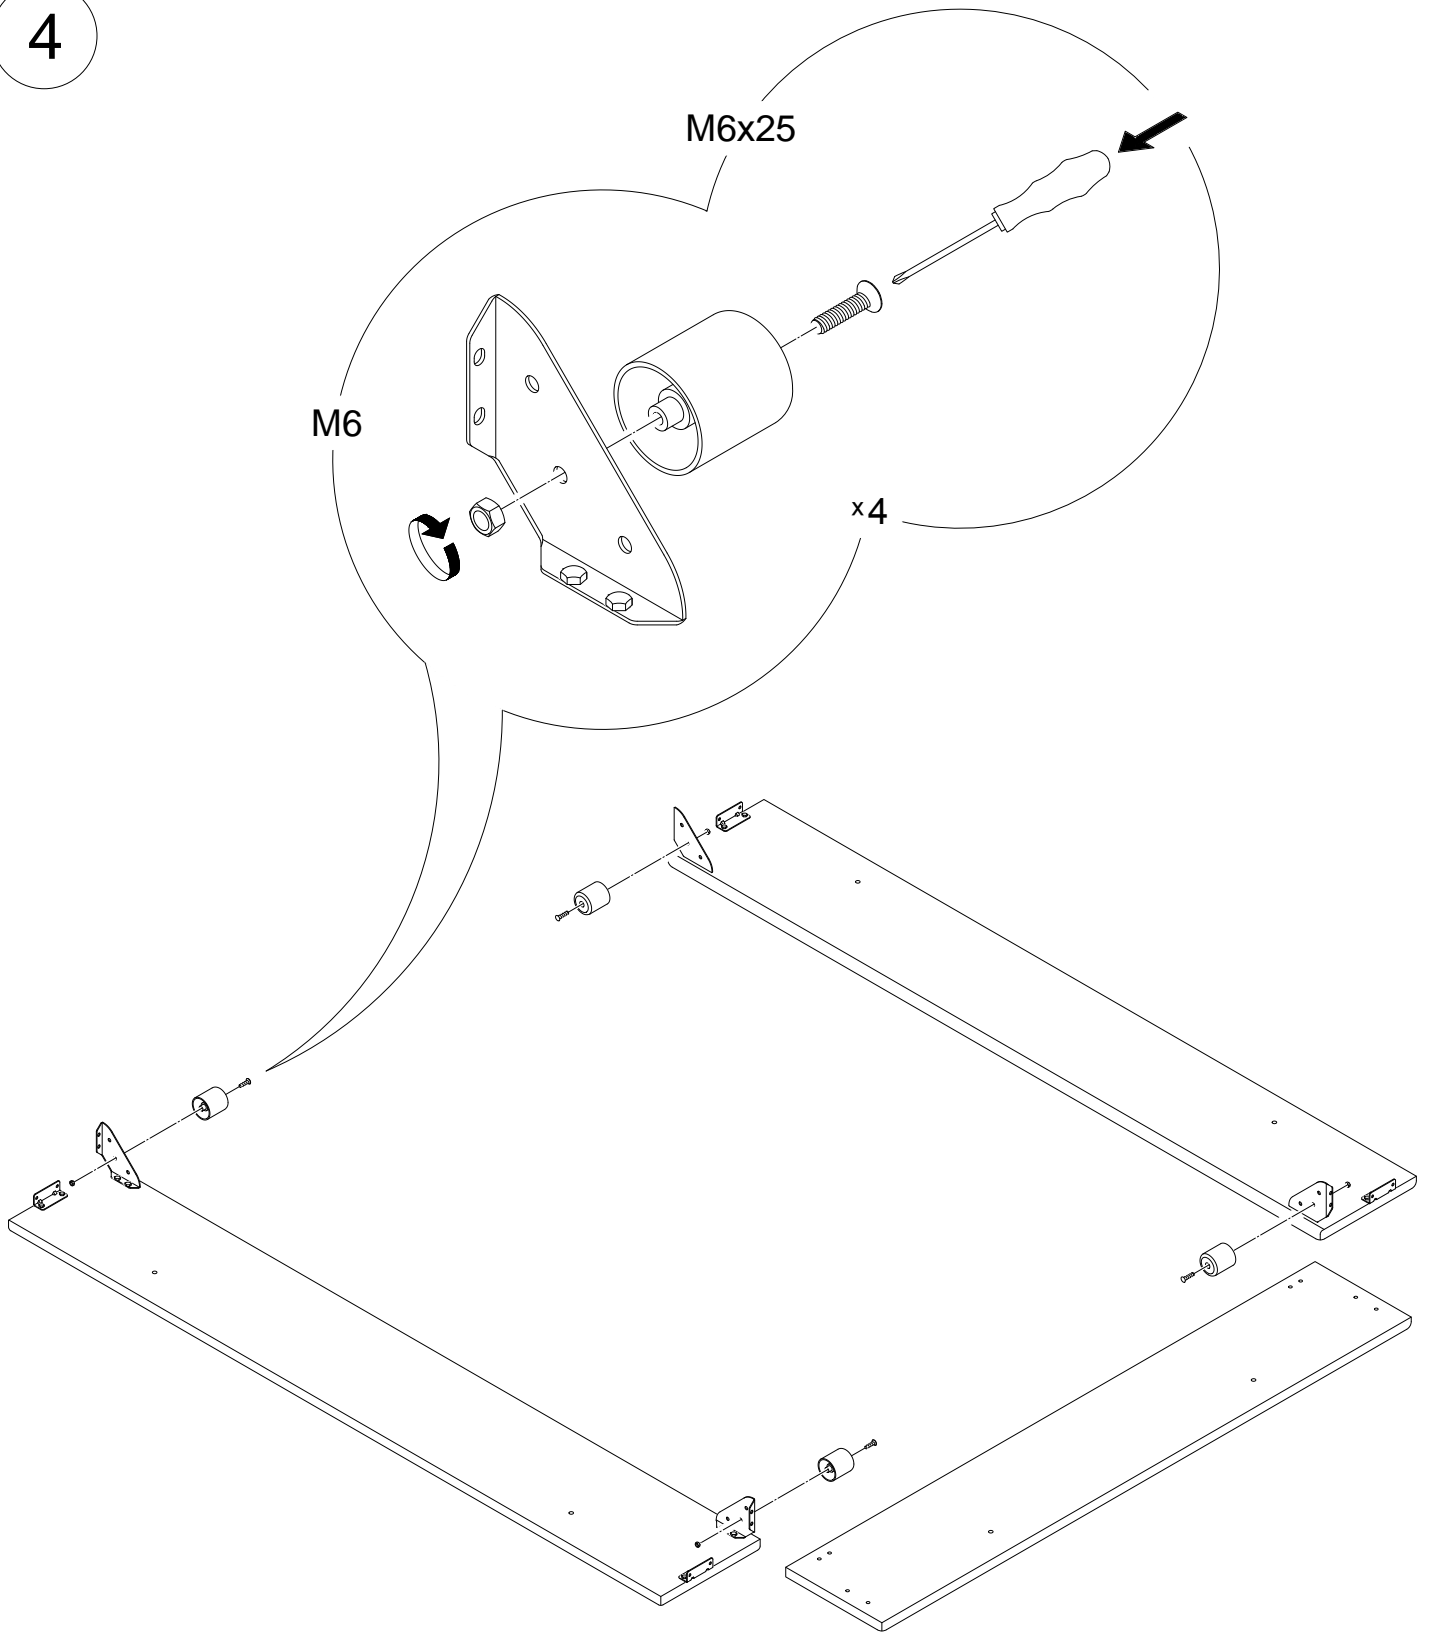




5

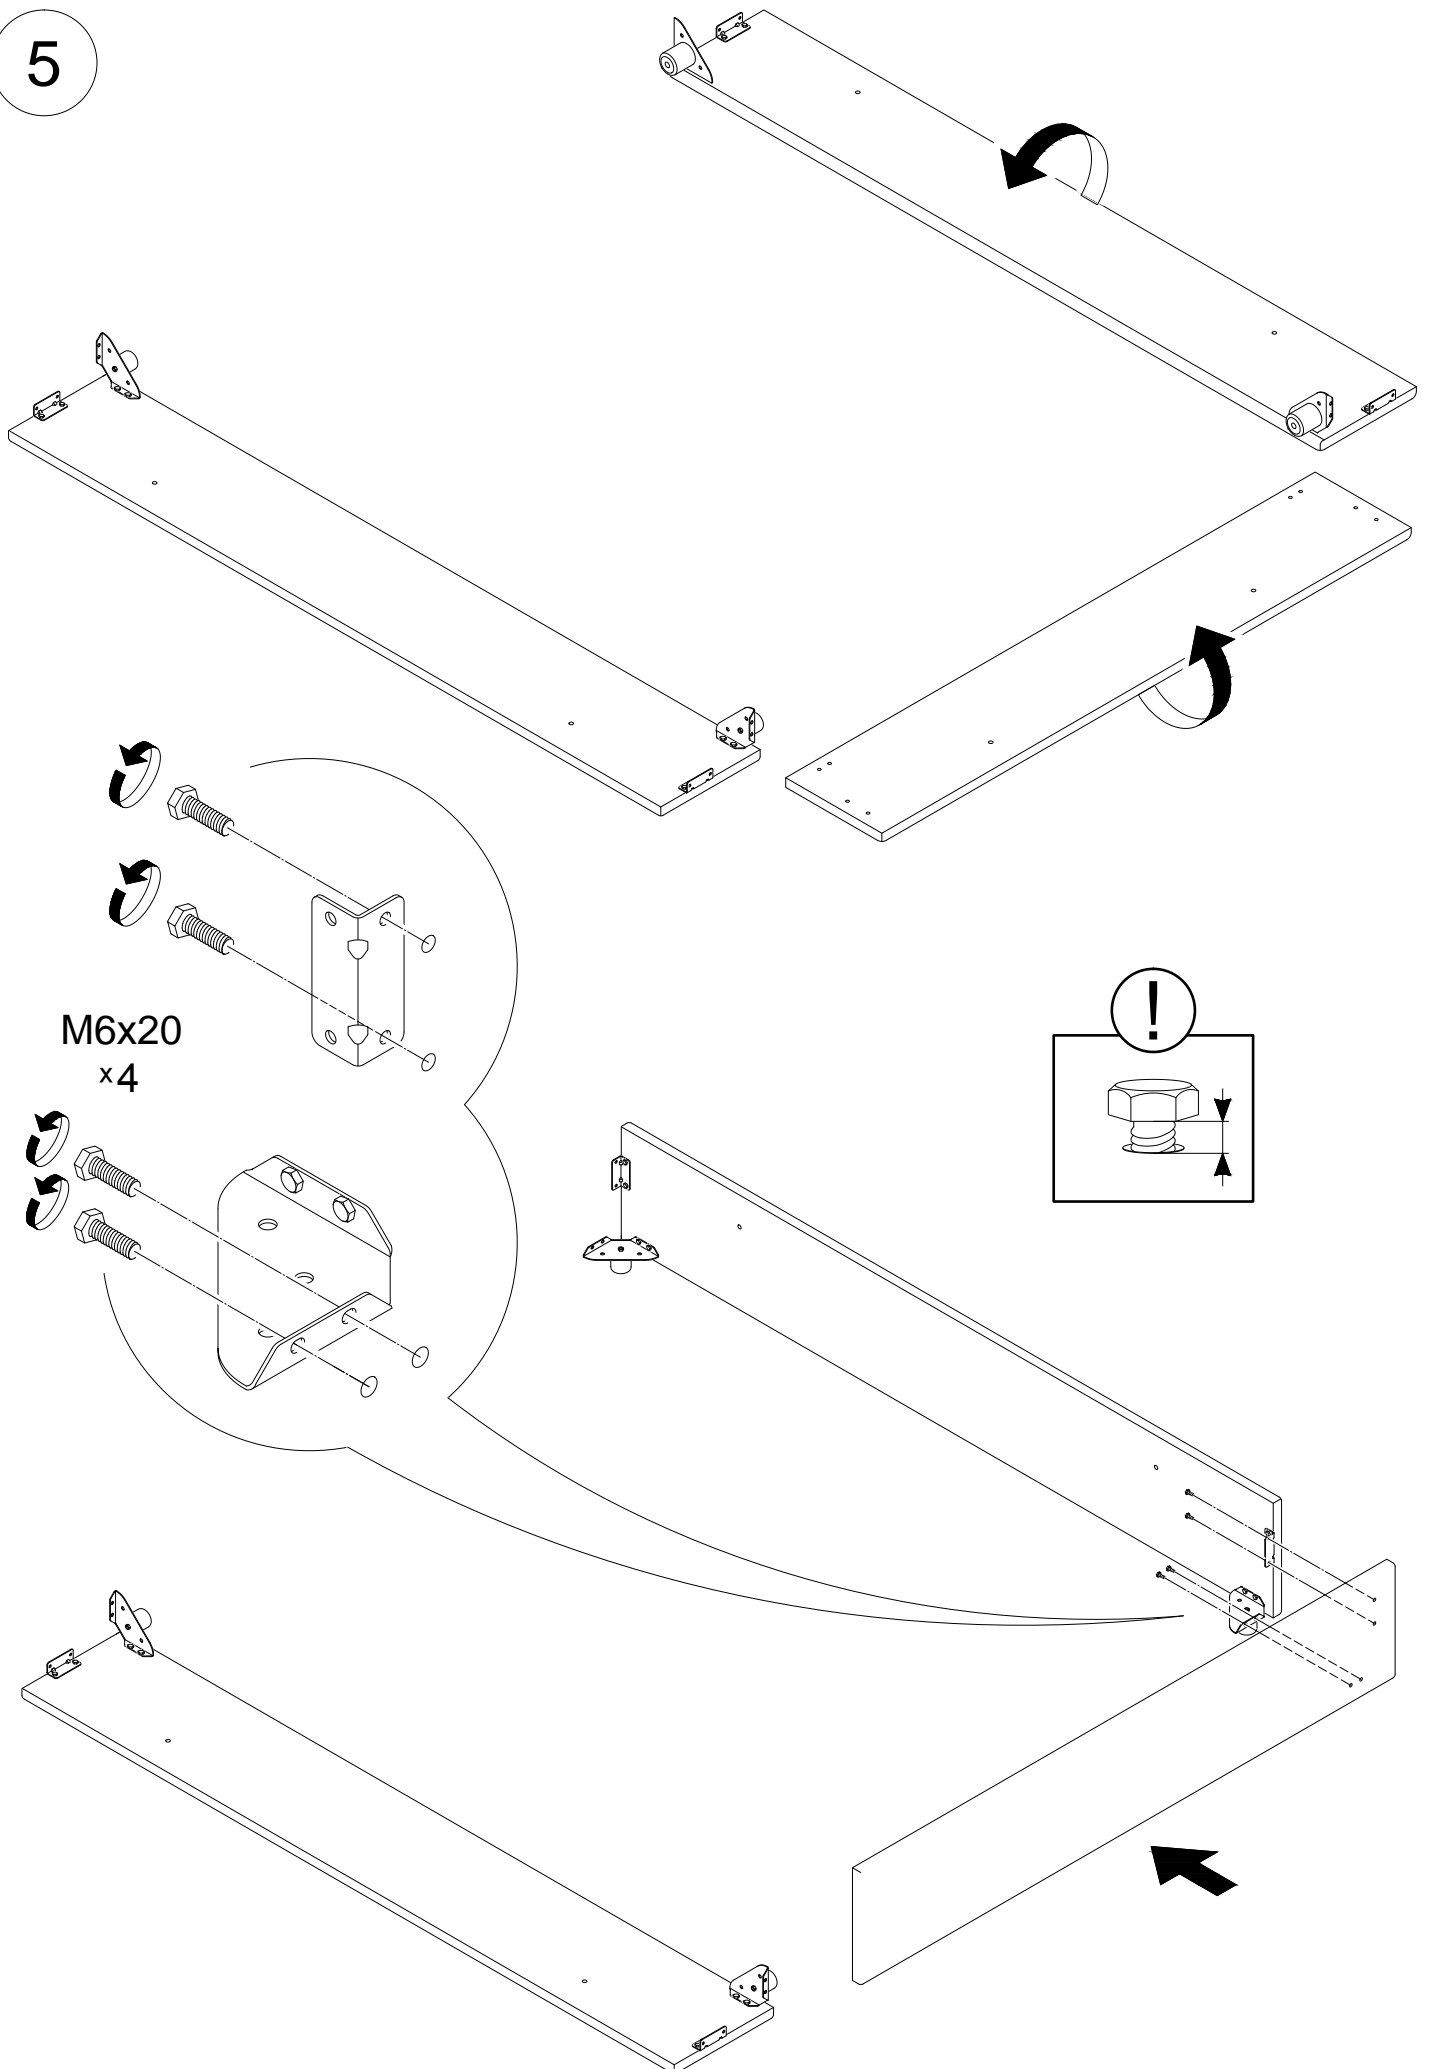



6

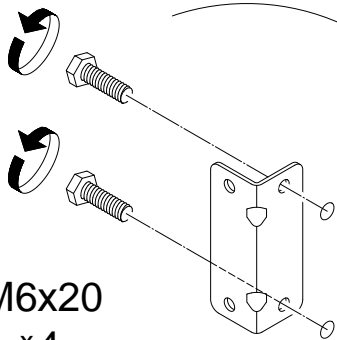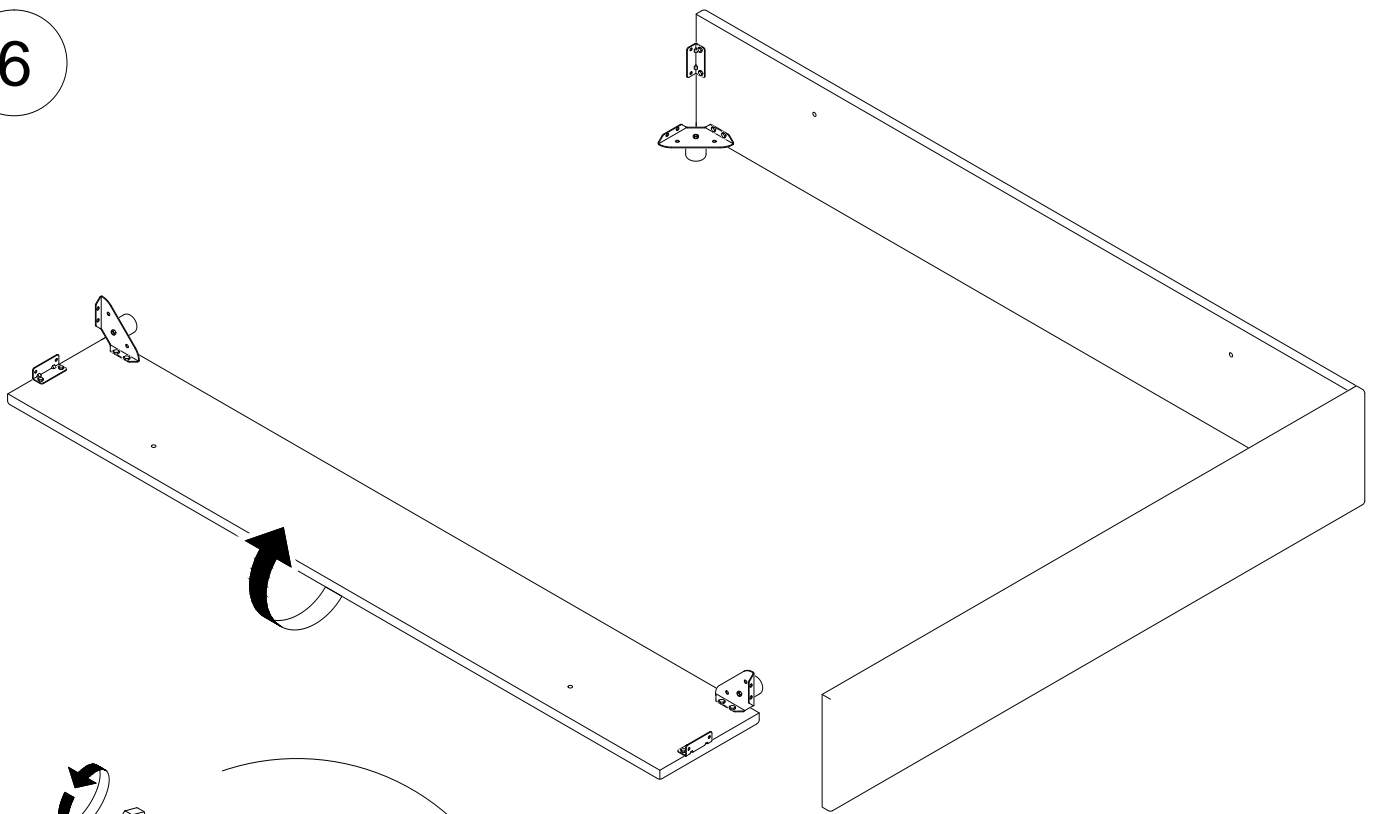



M6x20
x4

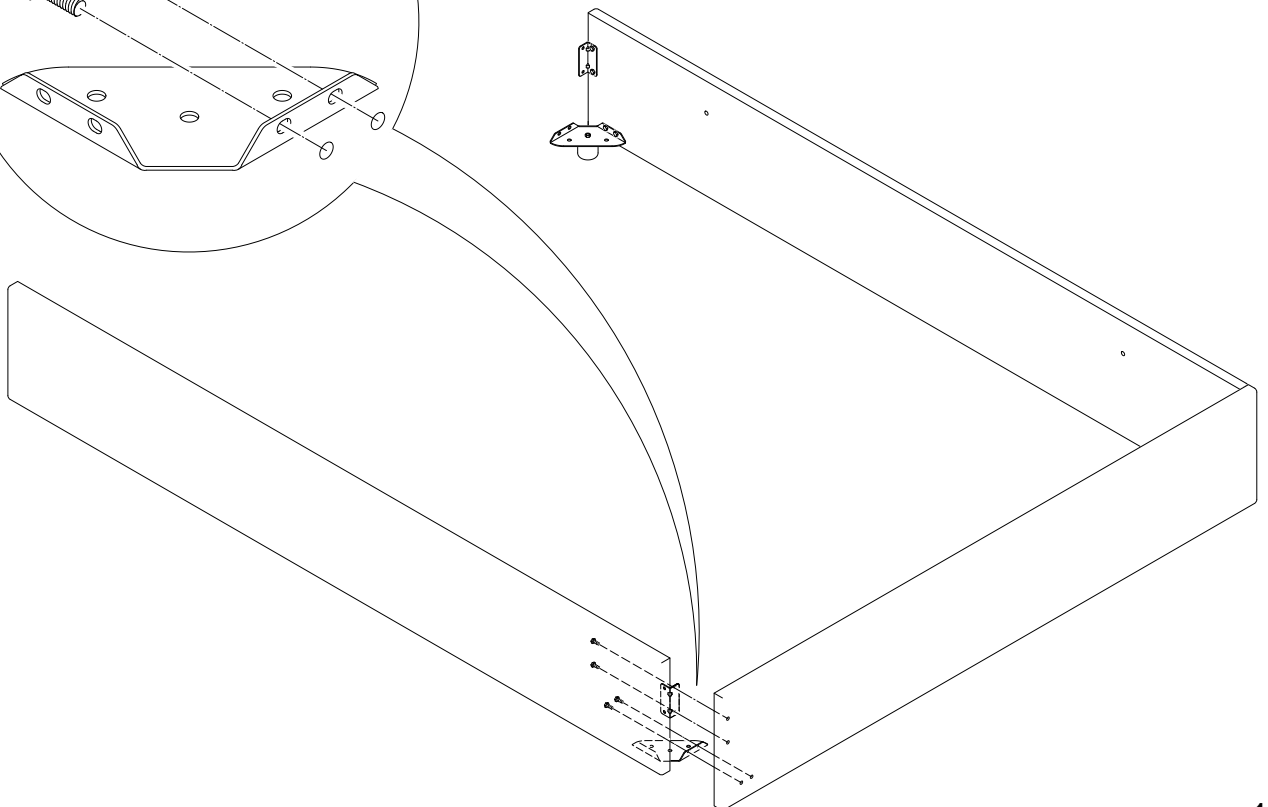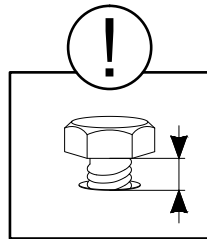
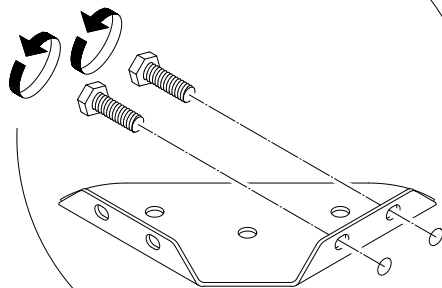


7

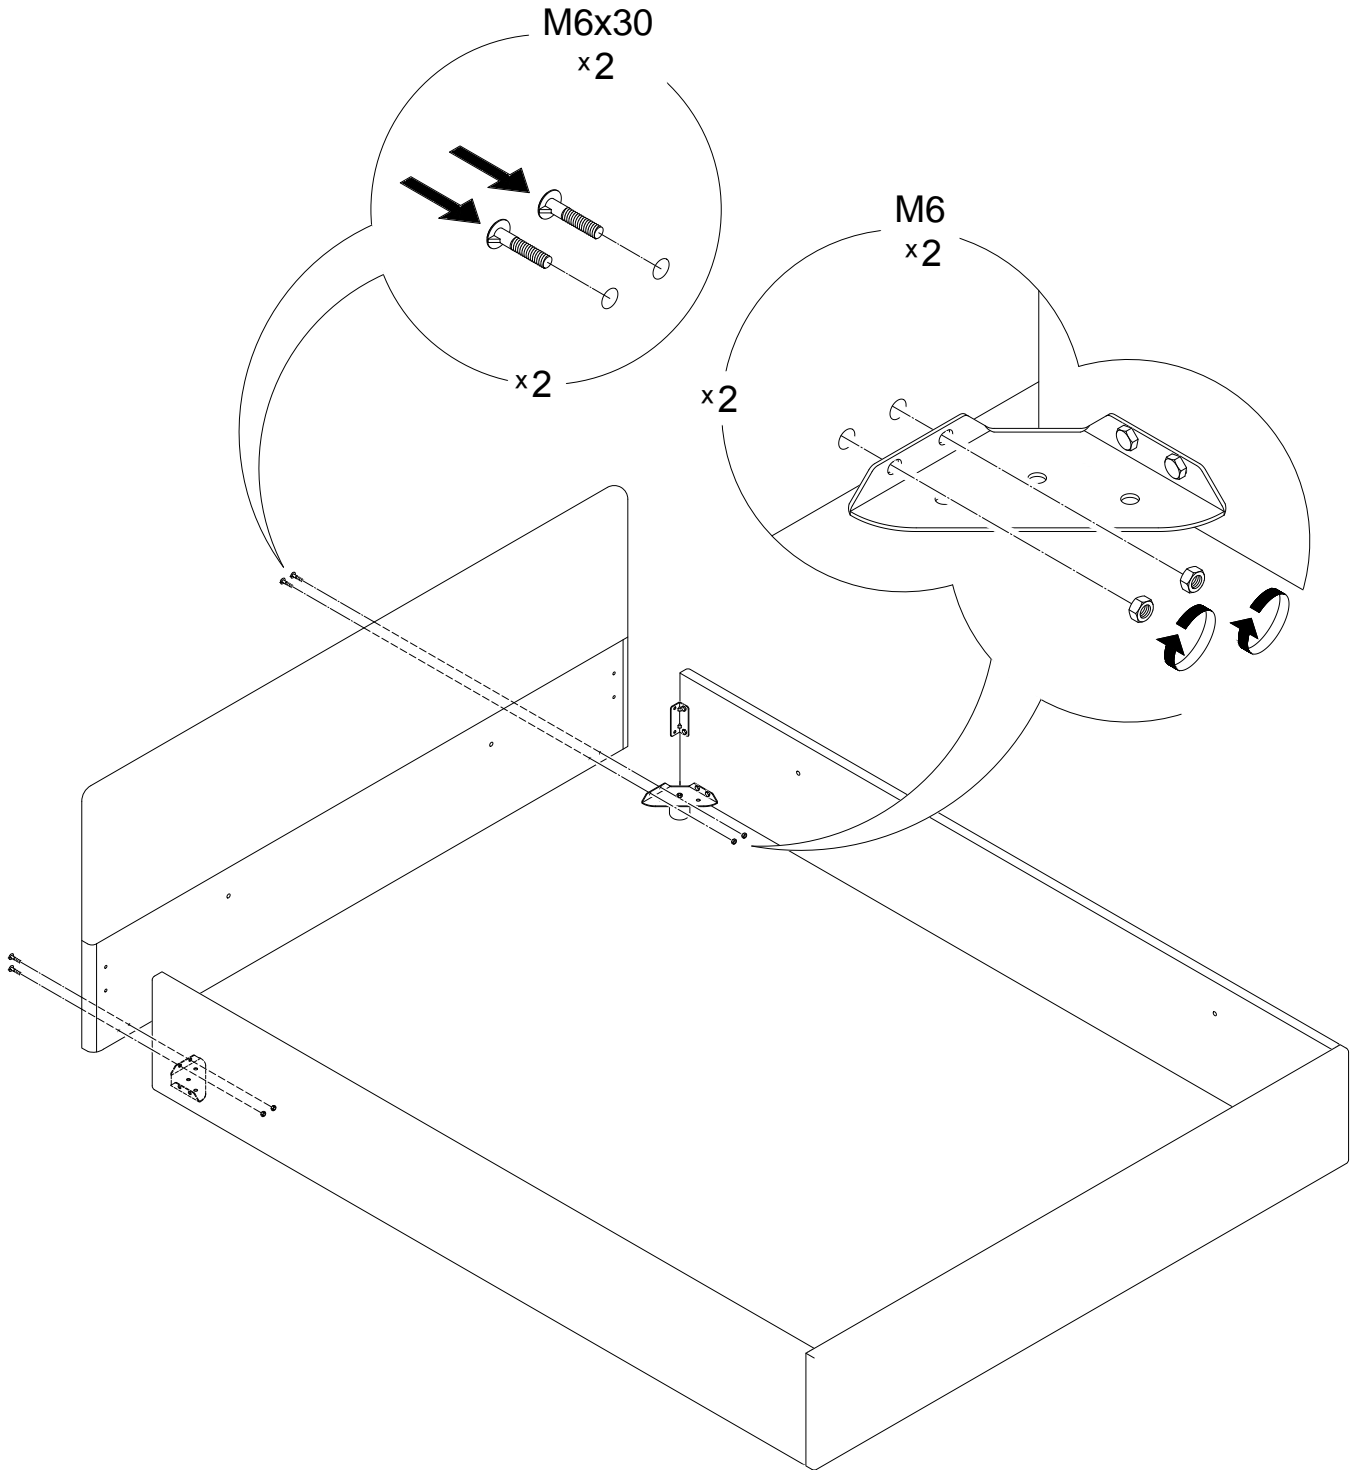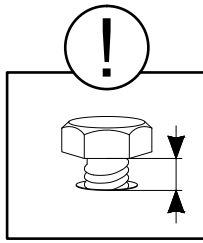




8

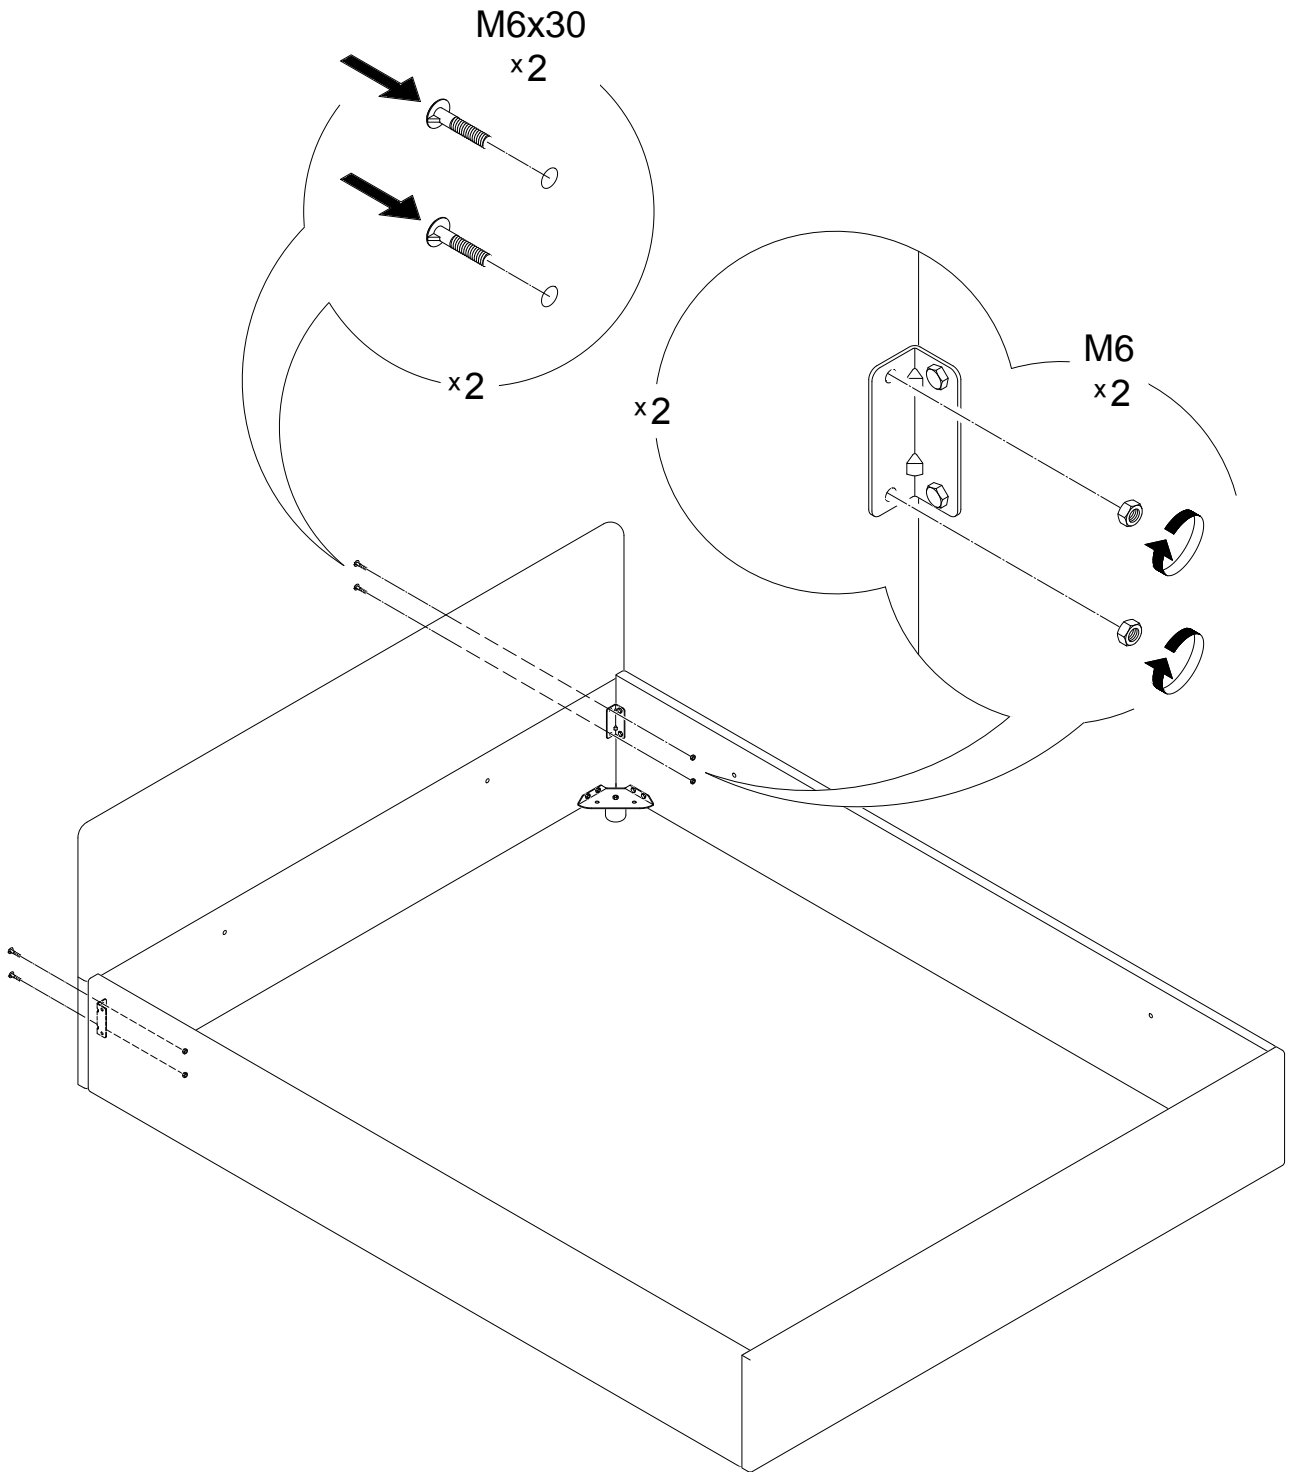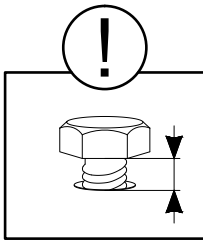

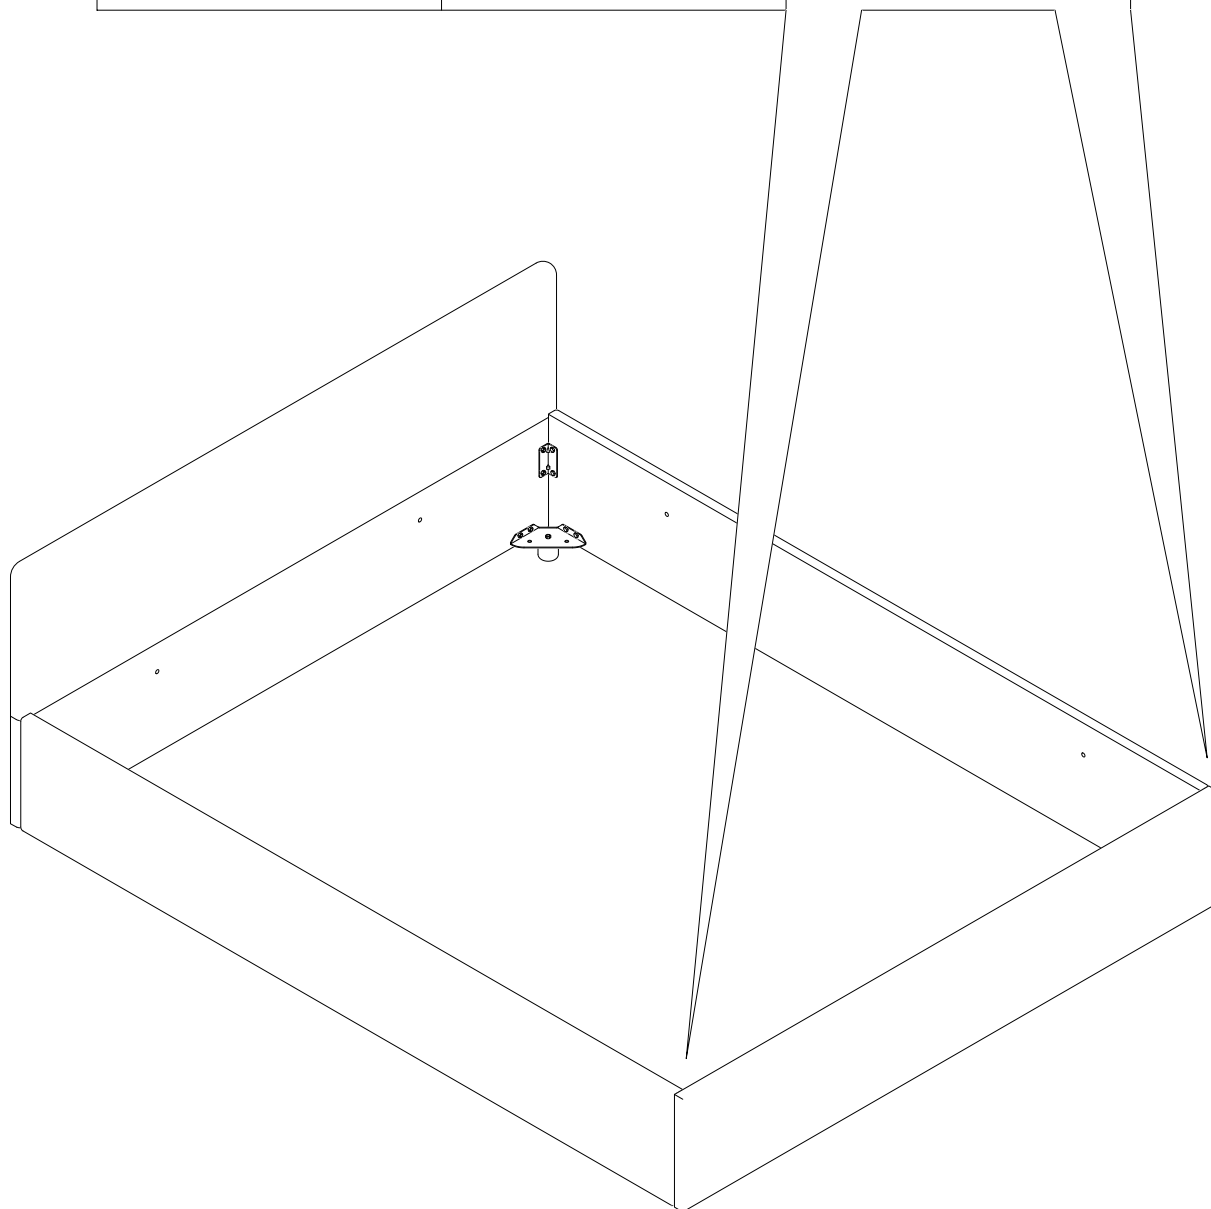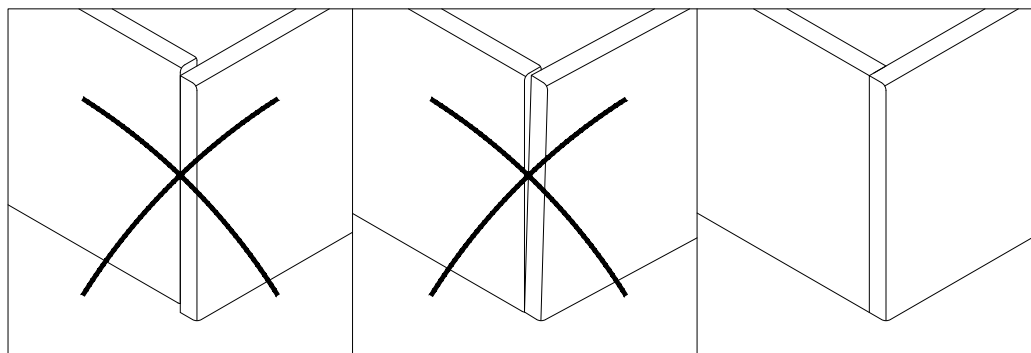


- 2
- 3
- 5
- 6
- 7
- 8

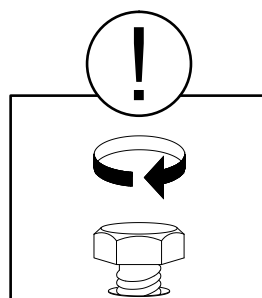


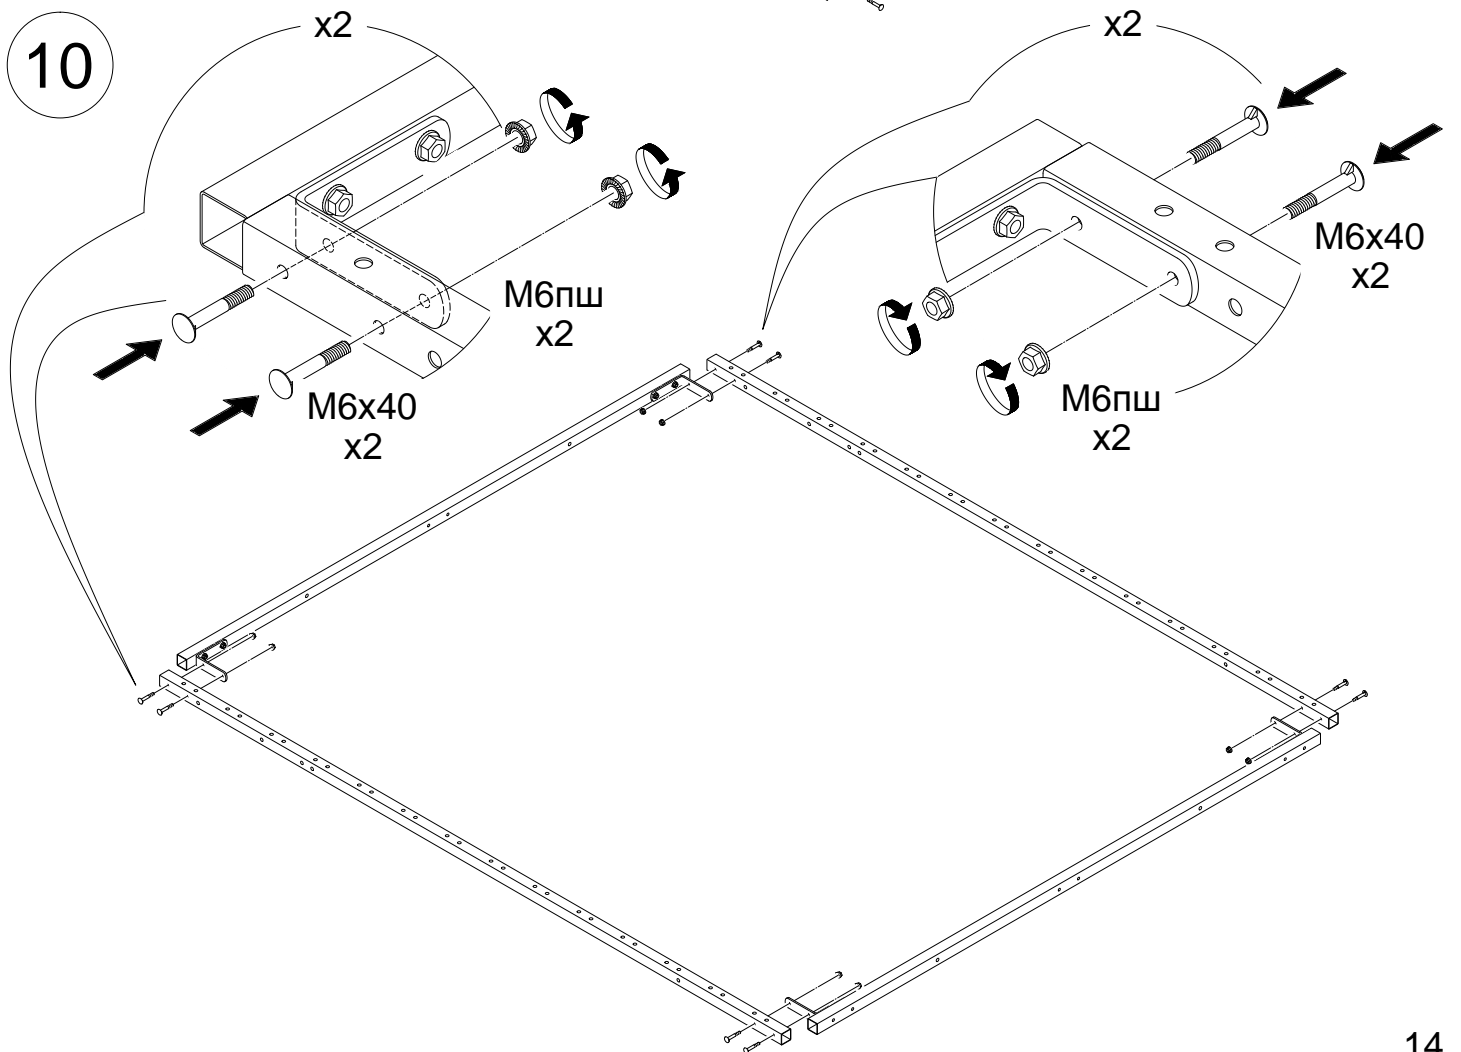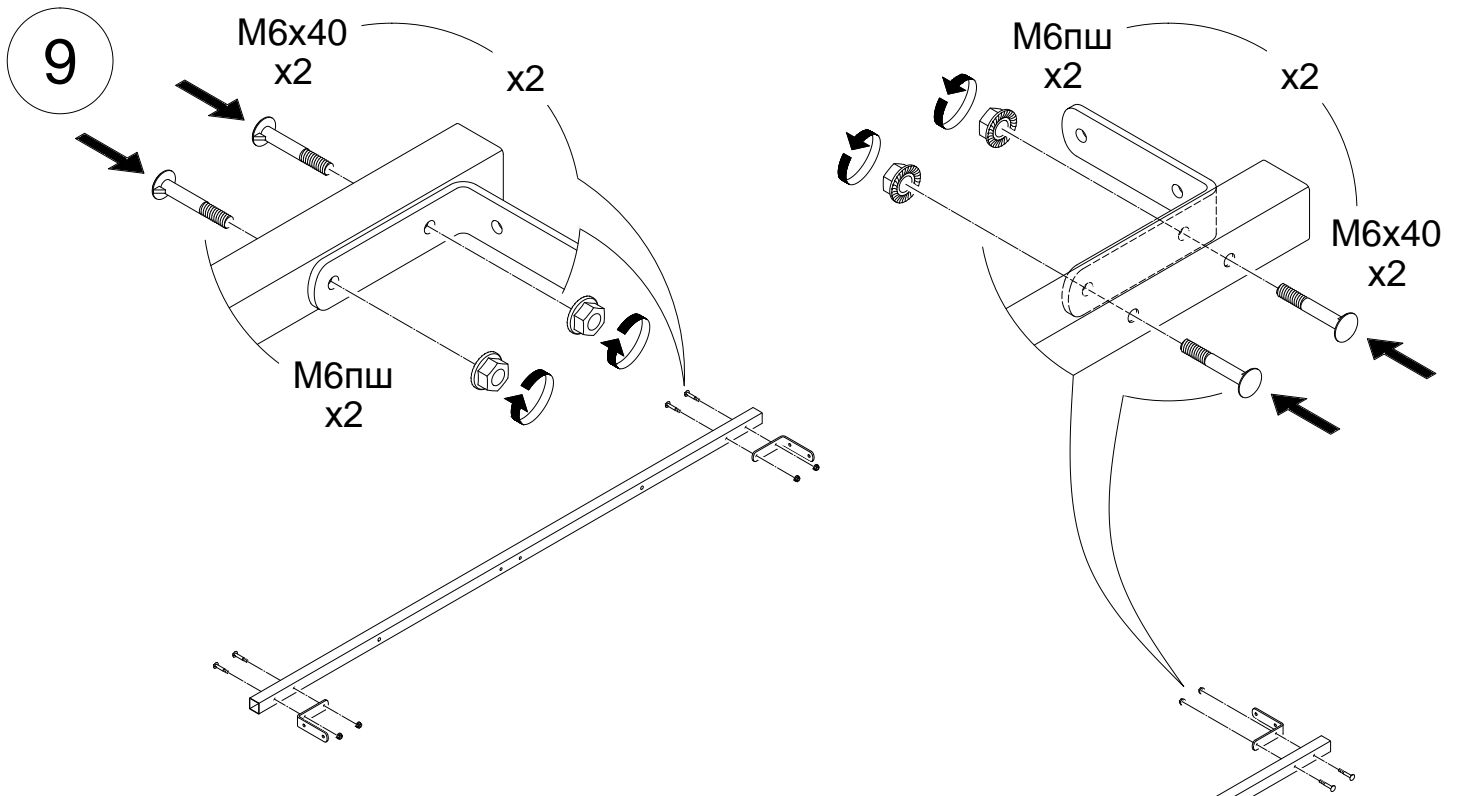


11

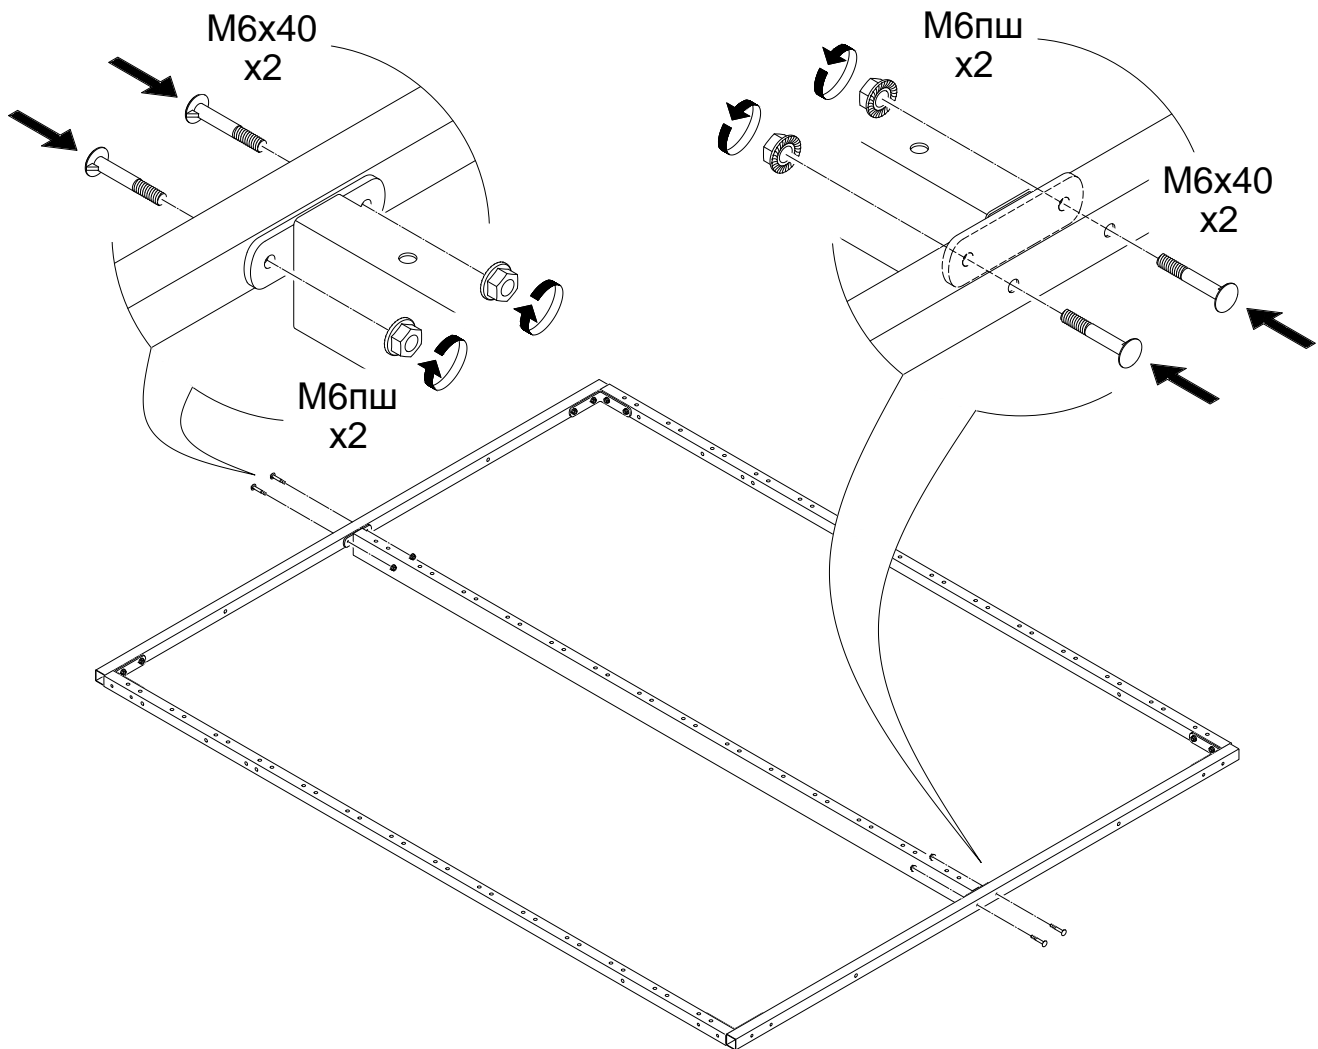


12

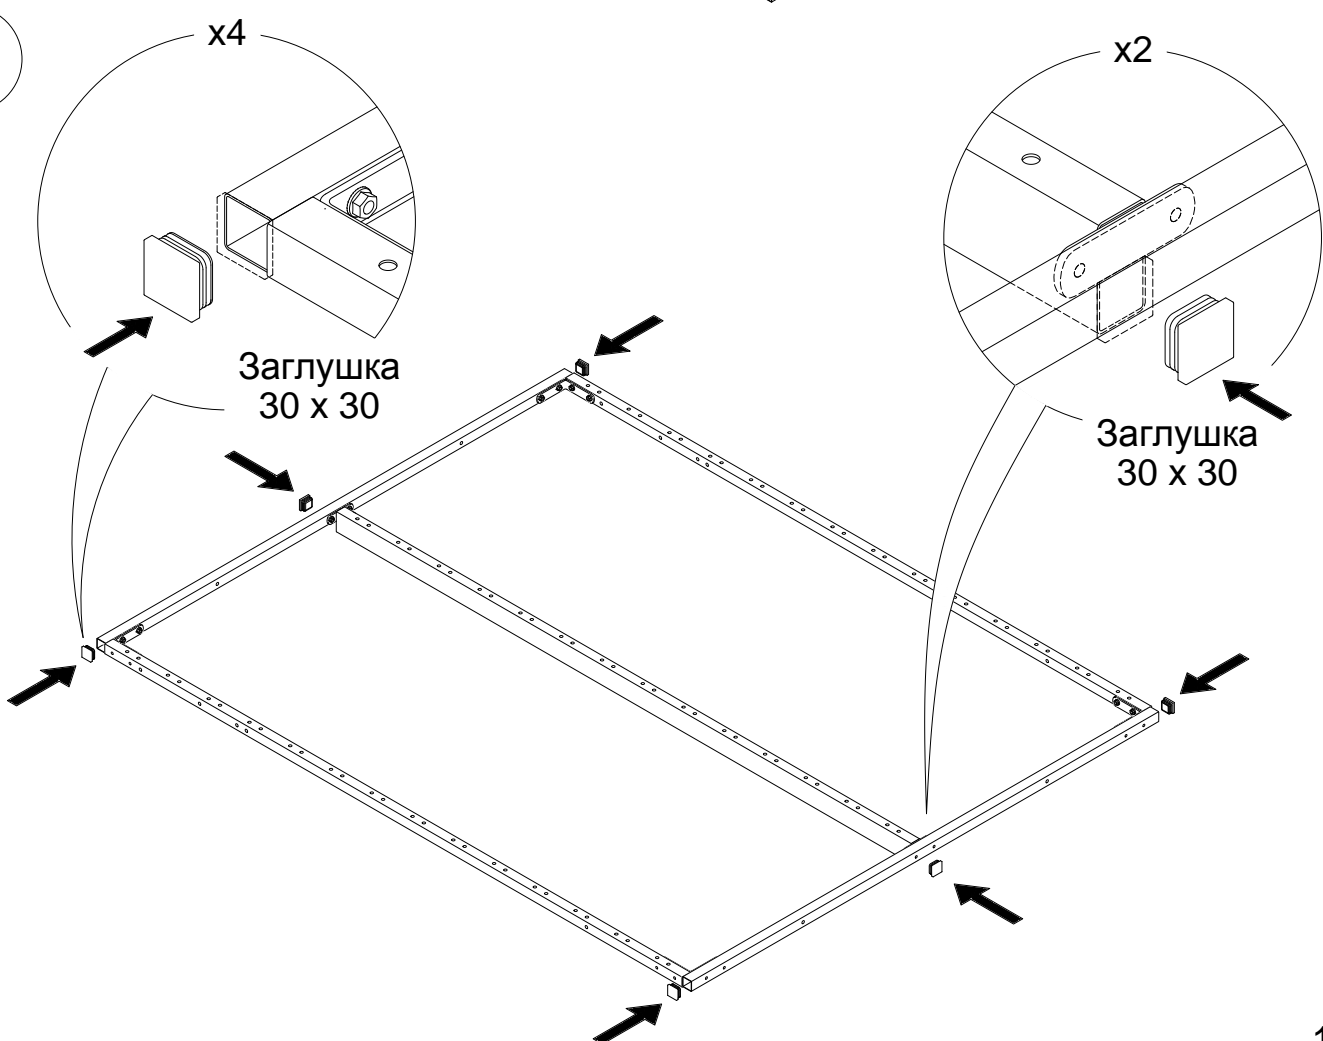


13

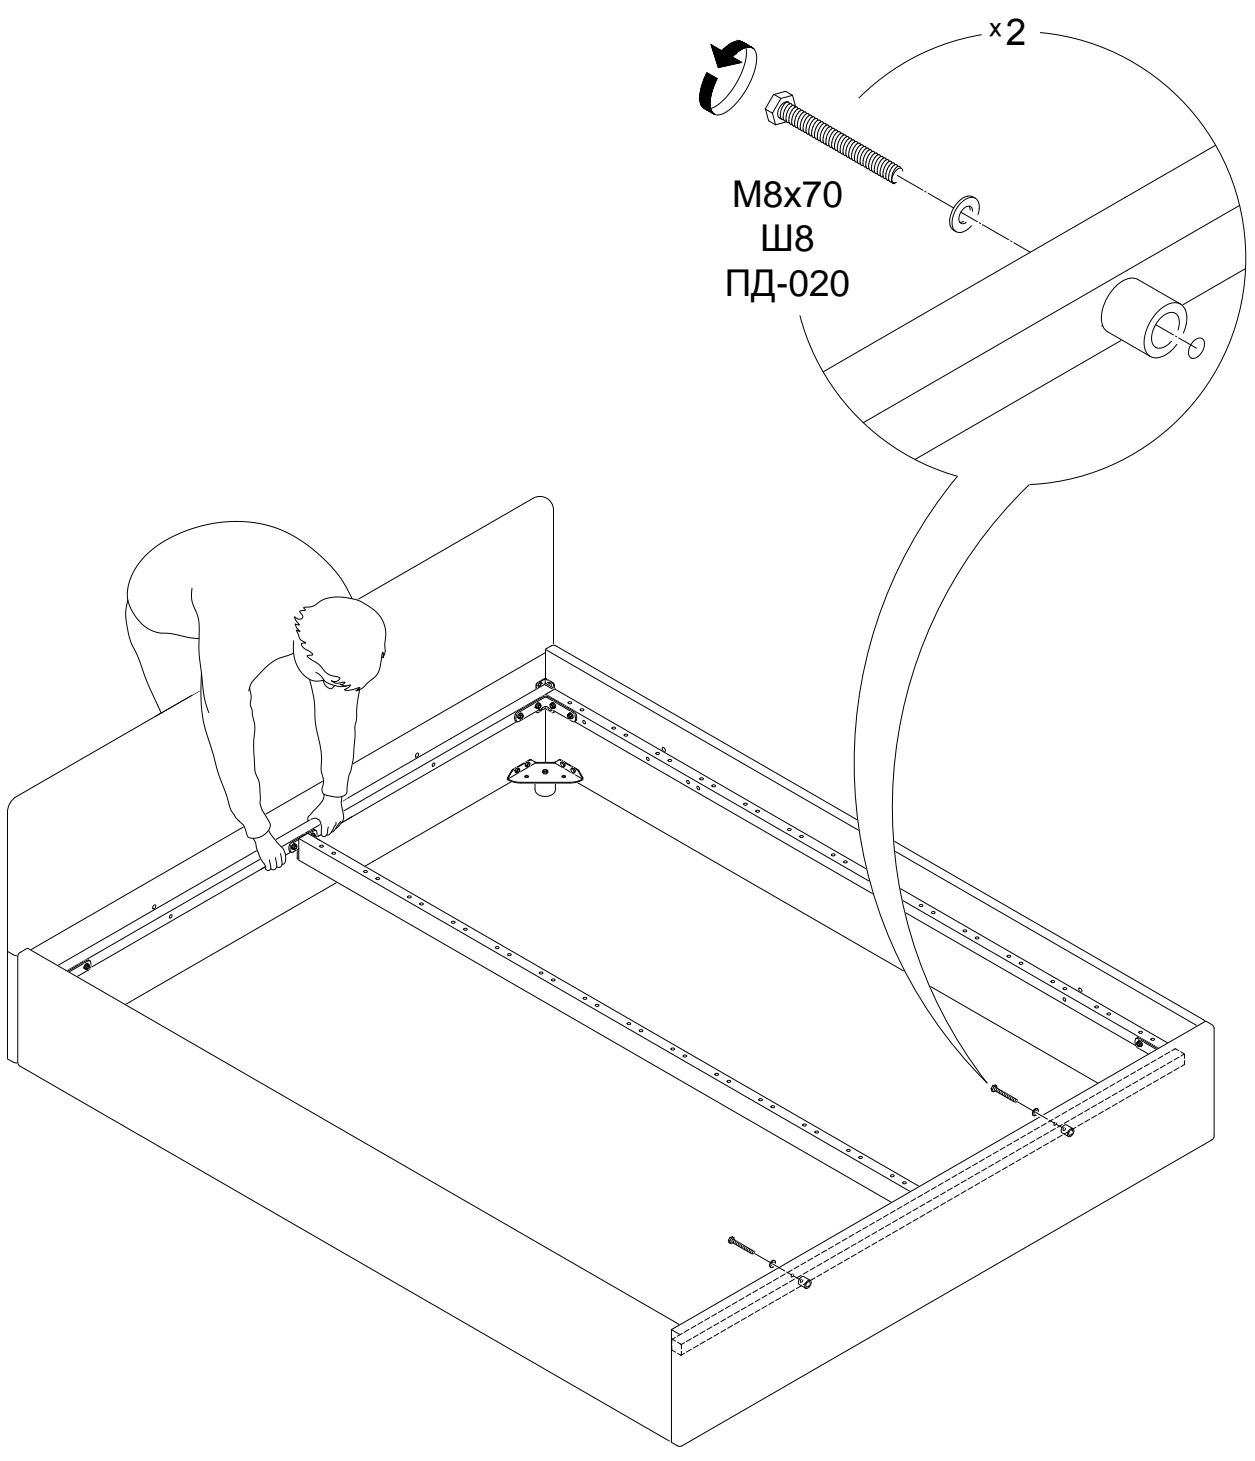


14

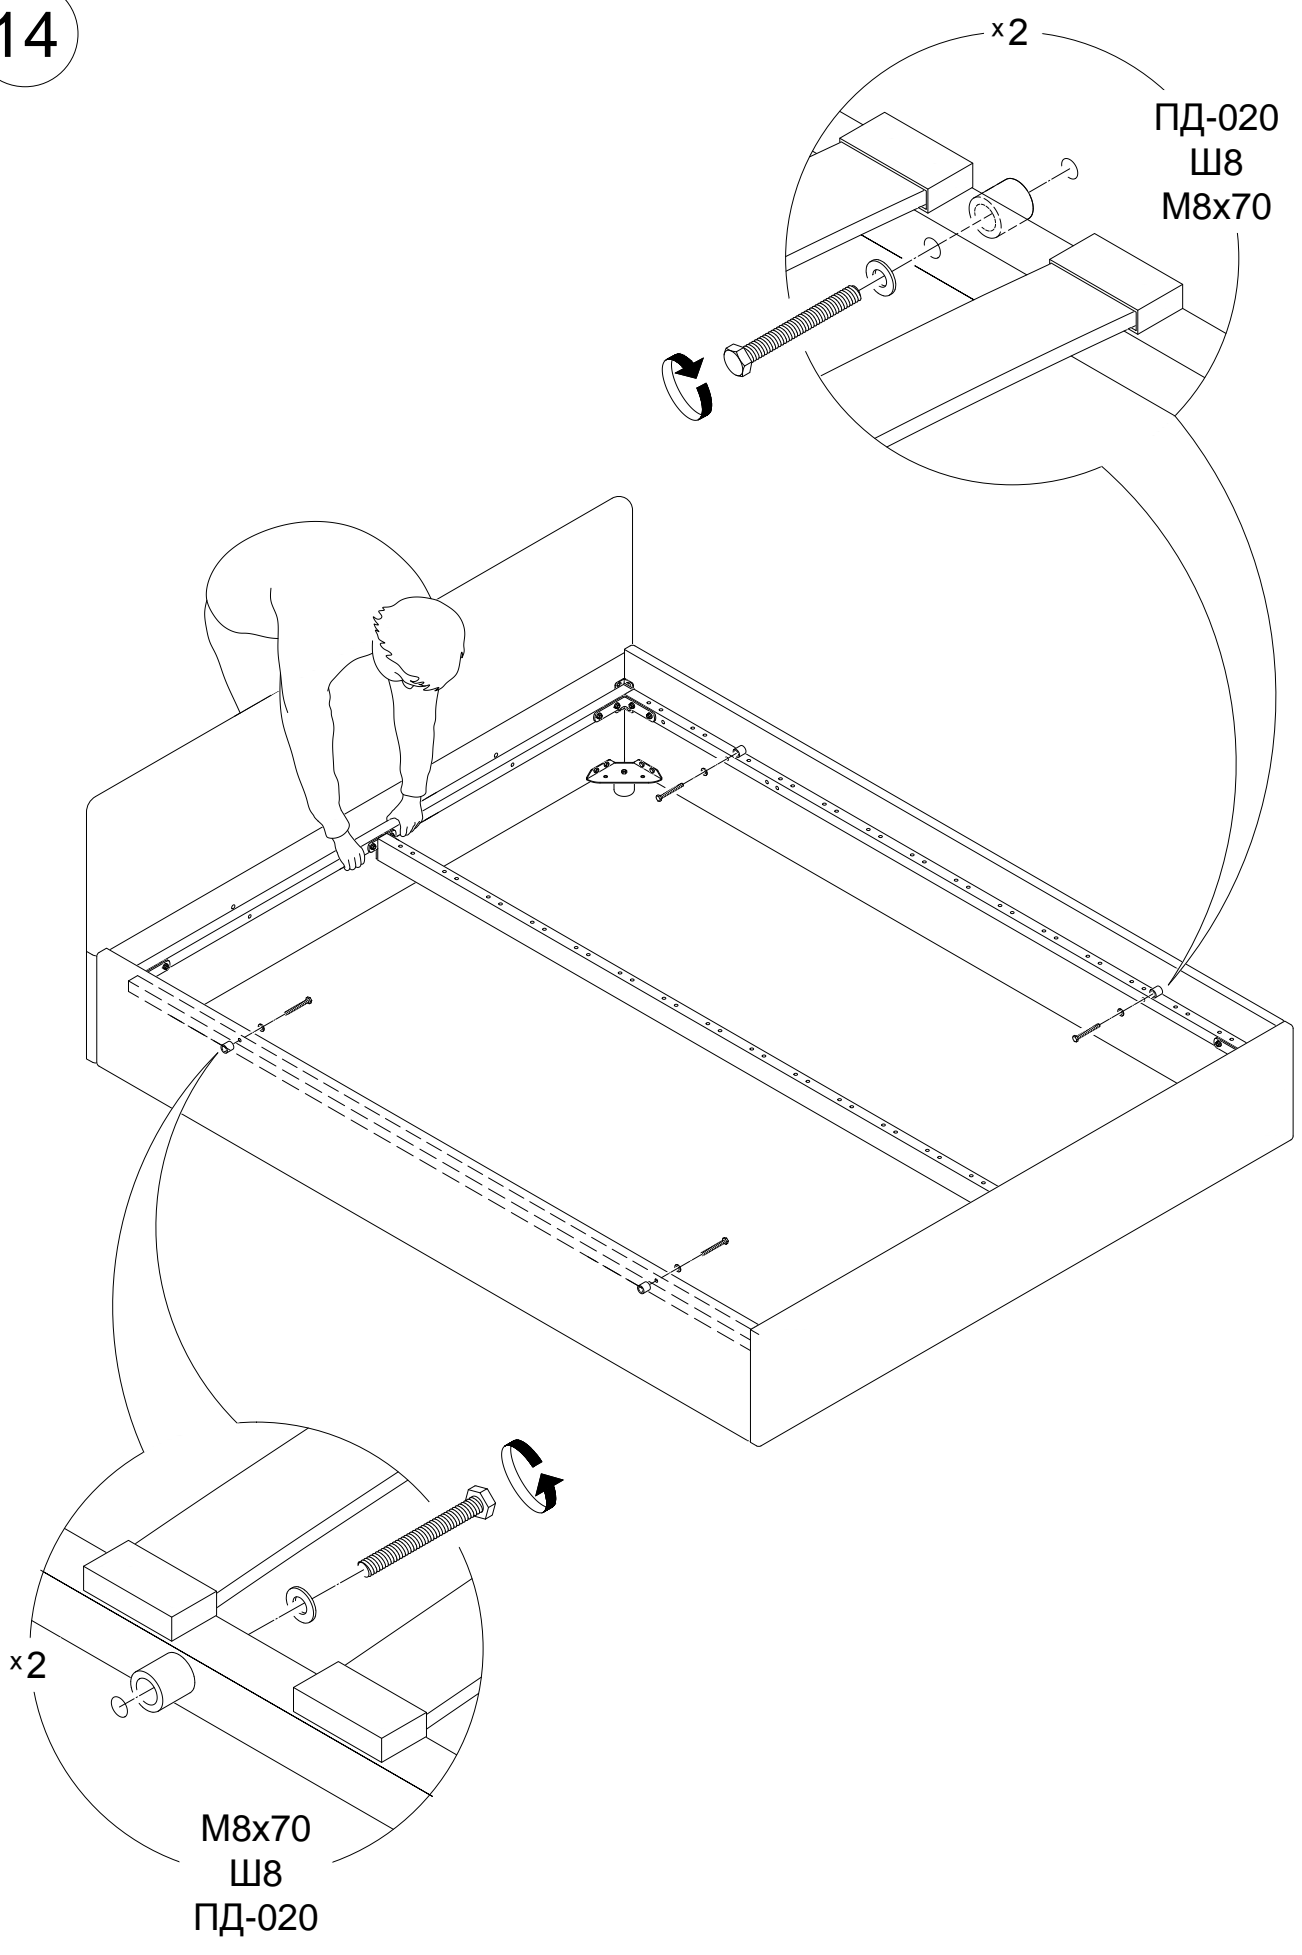

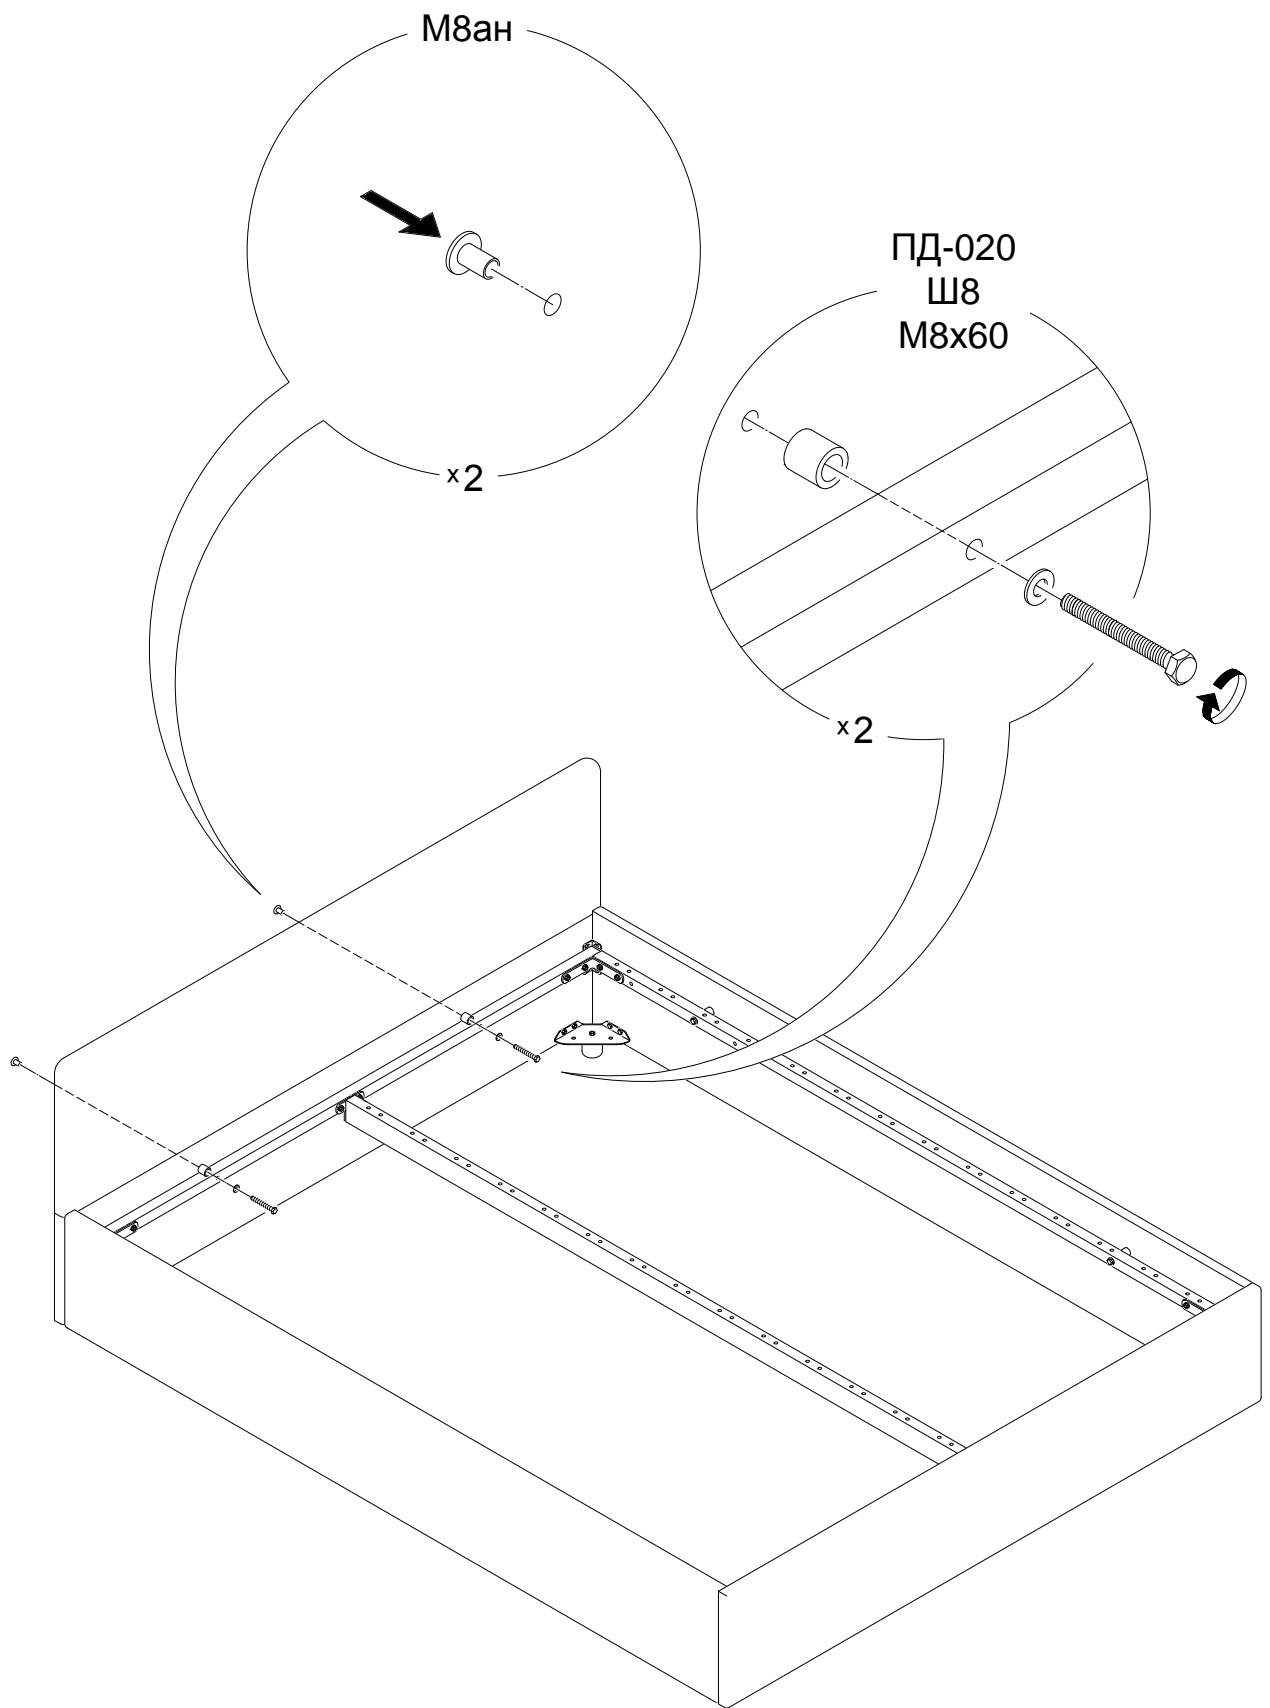

16

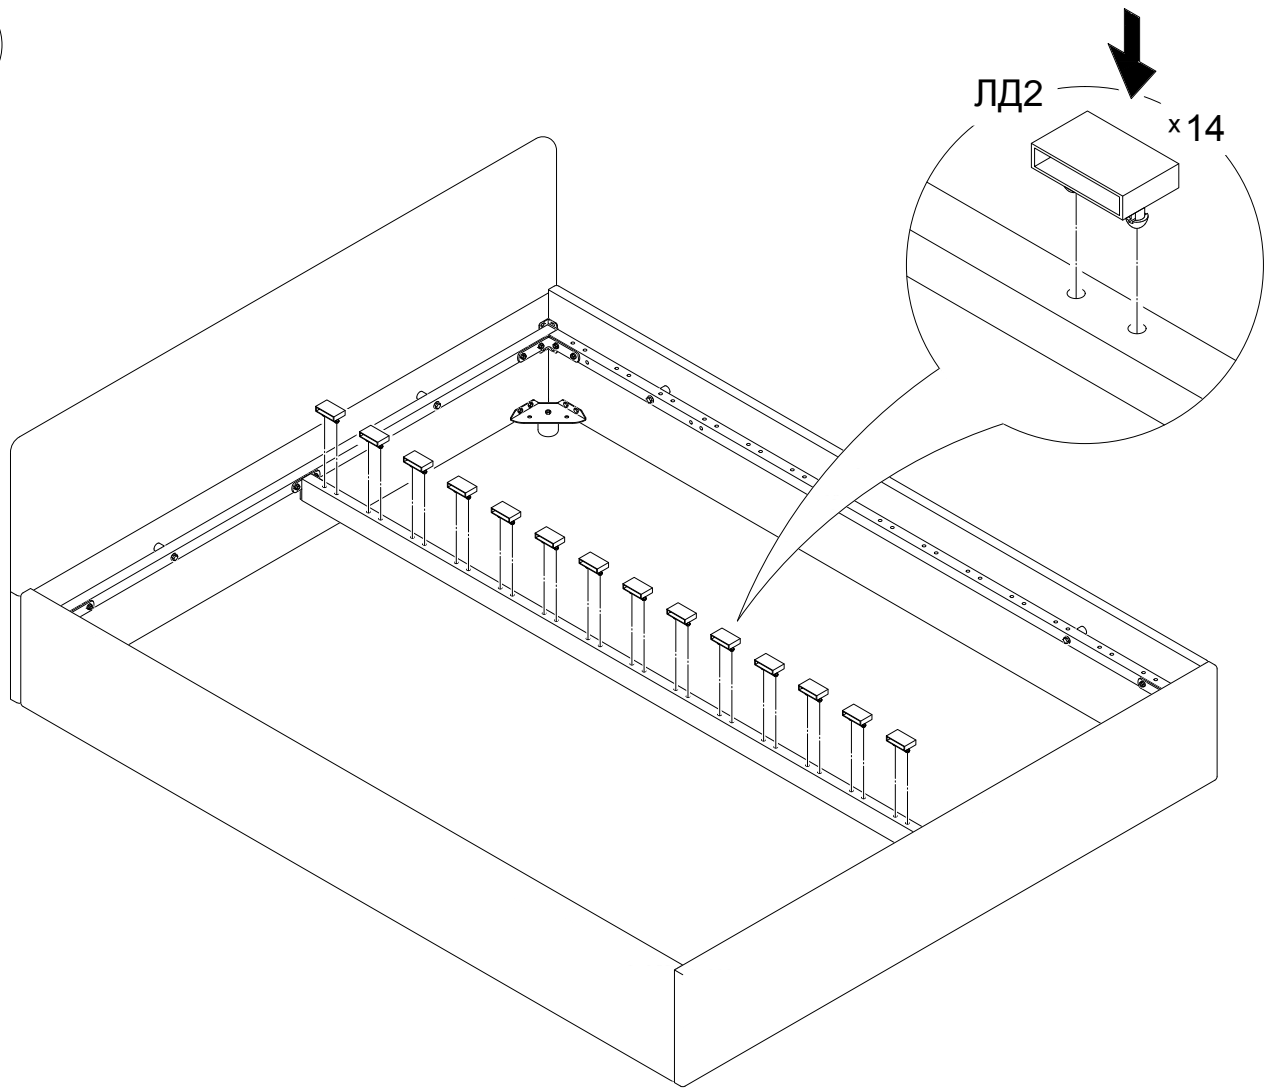

17

